 


DRAGON

Electric piston pump



This manual is to be considered as an English language translation of the original manual in Italian. The manufacturer shall bear no responsibility for any damages or inconveniences that may arise due to the incorrect translation of the instructions contained within the original manual in Italian.

Due to a constant product improvement programme, the factory reserves the right to modify technical details mentioned in this manual without prior notice.



DRAGON

Electric piston pump

INDEX

A	WARNINGS	2
B	WORKING PRINCIPLE	3
C	TECHNICAL DATA	4
D	DESCRIPTION OF THE EQUIPMENT	5
E	TRANSPORT AND UNPACKING	8
F	CONDITIONS OF GUARANTEE	9
G	SAFETY RULES.....	9
H	SETTING-UP	10
I	WORKING	14
J	CLEANING AT THE END OF THE WORK	17
K	ROUTINE MAINTENANCE	21
L	PROBLEMS AND SOLUTIONS	23
M	CORRECT PROCEDURE OF DECOMPRESSION	24
N	REPLACEMENT OF THE PUMPING GROUP'S GASKETS.....	25
SPARE PARTS		
O	COMPLETE ELECTRO-MECHANICAL UNIT	32
P	COMPLETE RIGID PUMPING ELEMENT	34
Q	COMPLETE SHORT PUMPING ELEMENT	36
R	COMPLETE LONG ELEMENT	38
S	BASIC HYDRAULIC BLOCK REF. 30400	40
T	CIRCULATION SYSTEM UNIT	42
U	CARRIAGE.....	43
V	ELECTRICAL CONTROL - EXPLODED VIEW	44
W	LINER MACHINE TYPE	45
X	PETROL-POWERED DRAGON	48
Y	HIGH PRESSURE GUN "AT 300"	52
Z	ELECTRIC MOTOR	54
AA	ELECTRICAL DIAGRAM.....	55
AB	ACCESSORIES.....	56
AC	VERSIONS.....	62
	DECLARATION OF CONFORMITY.....	63

**WE ADVISE THE USE OF THIS EQUIPMENT ONLY BY PROFESSIONAL OPERATORS.
ONLY USE THIS MACHINE FOR USAGE SPECIFICALLY MENTIONED IN THIS MANUAL.**

Thank you for choosing a **LARIUS S.R.L.** product.
As well as the product purchased, you will receive a range of support services
enabling you to achieve the results desired, quickly and professionally.



A WARNINGS

The table below provides the meaning of the symbols used in this manual in relation to using, earthing, operating, maintaining, and repairing of this equipment.

	<ul style="list-style-type: none"> • Read this operator's manual carefully before using the equipment. • An improper use of this machine can cause injuries to people or things. • Do not use this machine when under the influence of drugs or alcohol. • Do not modify the equipment under any circumstances. • Use products and solvents that are compatible with the various parts of the equipment, and read the manufacturer's warnings carefully. • See the Technical Details for the equipment given in the Manual. • Check the equipment for worn parts once a day. If any worn parts are found, replace them using ONLY original spare parts. • Keep children and animals away from work area. • Comply with all safety standards.
	<ul style="list-style-type: none"> • It indicates an accident risk or serious damage to equipment if this warning is not followed.
	<p>FIRE AND EXPLOSION HAZARD</p> <ul style="list-style-type: none"> • Solvent and paint fumes in work area can ignite or explode. • To help prevent fire and explosion: <ul style="list-style-type: none"> - Use equipment ONLY in well ventilated area. - Eliminate all ignition sources, such as pilot lights, cigarettes and plastic drop cloths (potential static arc). - Ground equipment and conductive objects. - Use only grounded hoses. - Do not use trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminium equipment. Such use can cause serious chemical reaction and equipment rupture, and result in death, serious injury, and property damage. - Do not form connections or switch light switches on or off if the air contains inflammable fumes. • If electrical shocks or discharges are encountered the operation being carried out using the equipment must be stopped immediately. • Keep a fire extinguisher at hand in the immediate vicinity of the work area.
	<ul style="list-style-type: none"> • It indicates wound and finger squashing risk due to movable parts in the equipment. • Keep away from moving parts. • Do not use the equipment without the proper protection. • Before any inspection or maintenance of the equipment, carry out the decompression procedure explained in this manual, and prevent any risk of the equipment starting unexpectedly.
	<ul style="list-style-type: none"> • Report any risk of chemical reaction or explosion if this warning has not been given. • (IF PROVIDED) There is a risk of injury or serious lesion related to contact with the jet from the spray gun. If this should occur, IMMEDIATELY contact a doctor, indicating the type of product injected. • (IF PROVIDED) Do not spray before the guard has been placed over the nozzle and the trigger on the spray gun. • (IF PROVIDED) Do not put your fingers in the spray gun nozzle. • Once work has been completed, before carrying out any maintenance, complete the decompression procedure.
	<ul style="list-style-type: none"> • It indicates important recommendations about disposal and recycling process of products in accordance with the environmental regulations.
	<ul style="list-style-type: none"> • Mark any clamps attached to earth cables. • Use ONLY 3-wire extension cords and grounded electrical outlets. • Before starting work make sure that the electrical system is grounded and that it complies with safety standards. • High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. • To help prevent injection, always: <ul style="list-style-type: none"> - (IF PROVIDED) Engage trigger lock when not spraying. - (IF PROVIDED) Do not put your hand over the spray tip. Do not stop or deflect leaks with your hand, body or other. - (IF PROVIDED) Do not point gun at anyone or at any part of the body. - (IF PROVIDED) Never spray without tip guard. - Do pressure relief if you stop spraying or being servicing sprayer and before any maintenance operations. - Do not use components rated less than sprayer Maximum Working Pressure. - Never allow children to use this unit - (IF PROVIDED) Brace yourself; gun may recoil when triggered. <p>If high pressure fluid pierces your skin, the injury might look like "just a cut", but it is a serious wound! Get immediate medical attention.</p>
	<ul style="list-style-type: none"> • It is obligatory to wear suitable clothing as gloves, goggles and face shield. • Wear clothing that complies with the safety standards in force in the country in which the equipment is used. • Do not wear bracelets, earrings, rings, chains, or anything else that may hinder the operator's work. • Do not wear clothing with wide sleeves, scarves, ties, or any other piece of clothing that could get tangled up in moving parts of the equipment during the work, inspection, or maintenance cycles.



B WORKING PRINCIPLE

The **DRAGON** unit is defined “electric piston pump”. An electric piston pump is used for high pressure painting without air (from this process derives the term “airless”). The pump is controlled by an electric motor coupled with a reduction gear. A cam shaft and a connecting rod allow to obtain the reciprocating motion necessary to the working of the “pumping group” piston. The piston movement produces a “vacuum”.

The product is sucked, pushed towards the pump outlet and then sent to the gun through the flexible hose. An electronic device located next to the reduction box, is used to regulate and control the pressure of the material leaving the pump. When the pump reaches the set value, the motor stops and starts again when the value decreases. A safety valve avoiding overpressure, guarantees the total reliability of the equipment.



Fig. 1B

Fields of application	Application materials	
Indoor	Top-coat plaster	Intumescent
Outdoor	Self-levelling plasters	Encapsulators
Industrial buildings	Pre-mixed plasters (granulometry 0,0)	Insulation
Industrial constructions	Stuccos	Water proofing
Redeveloping	Plasters	Elastomers
Roofing	Fillers	Epoxi resins
		Bitumen



C TECHNICAL DATA

DRAGON	
Asupply (single-phase)*	230V C.A. 50Hz
Run generator supply (Single-phase)	9 Kw casynchronous
Motor power	2,4 kW
Max. Working pressure	230 bar
Max. Delivery	5 L/min
Material outlet	M16 x 1,5 (M)
Weight	66 Kg
Level of the sound pressure	≤ 60dB(A)
Minimum width	(A) 560 mm
Minimum height	(B) 945 mm
Maximum height	(C) 1040 mm
Minimum encumbrance	(D) 790 mm

*Available on request with special voltages

Parts of the pump in contact with the material Stainless Steel AISI 420B, PTFE; Aluminium, Galvanised steel

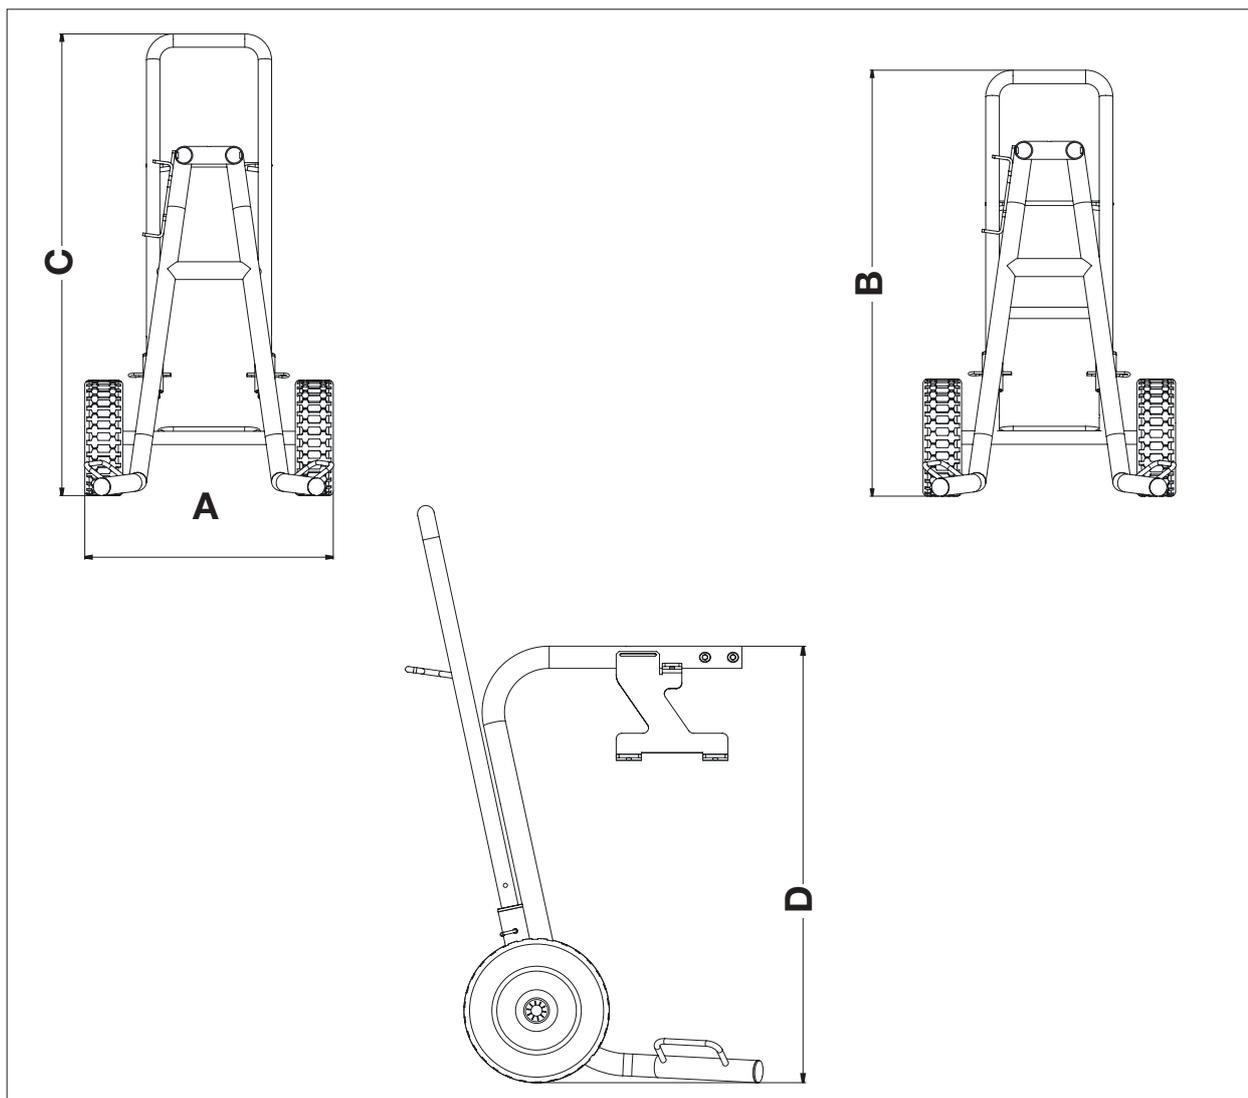


Fig. 1C

D DESCRIPTION OF THE EQUIPMENT

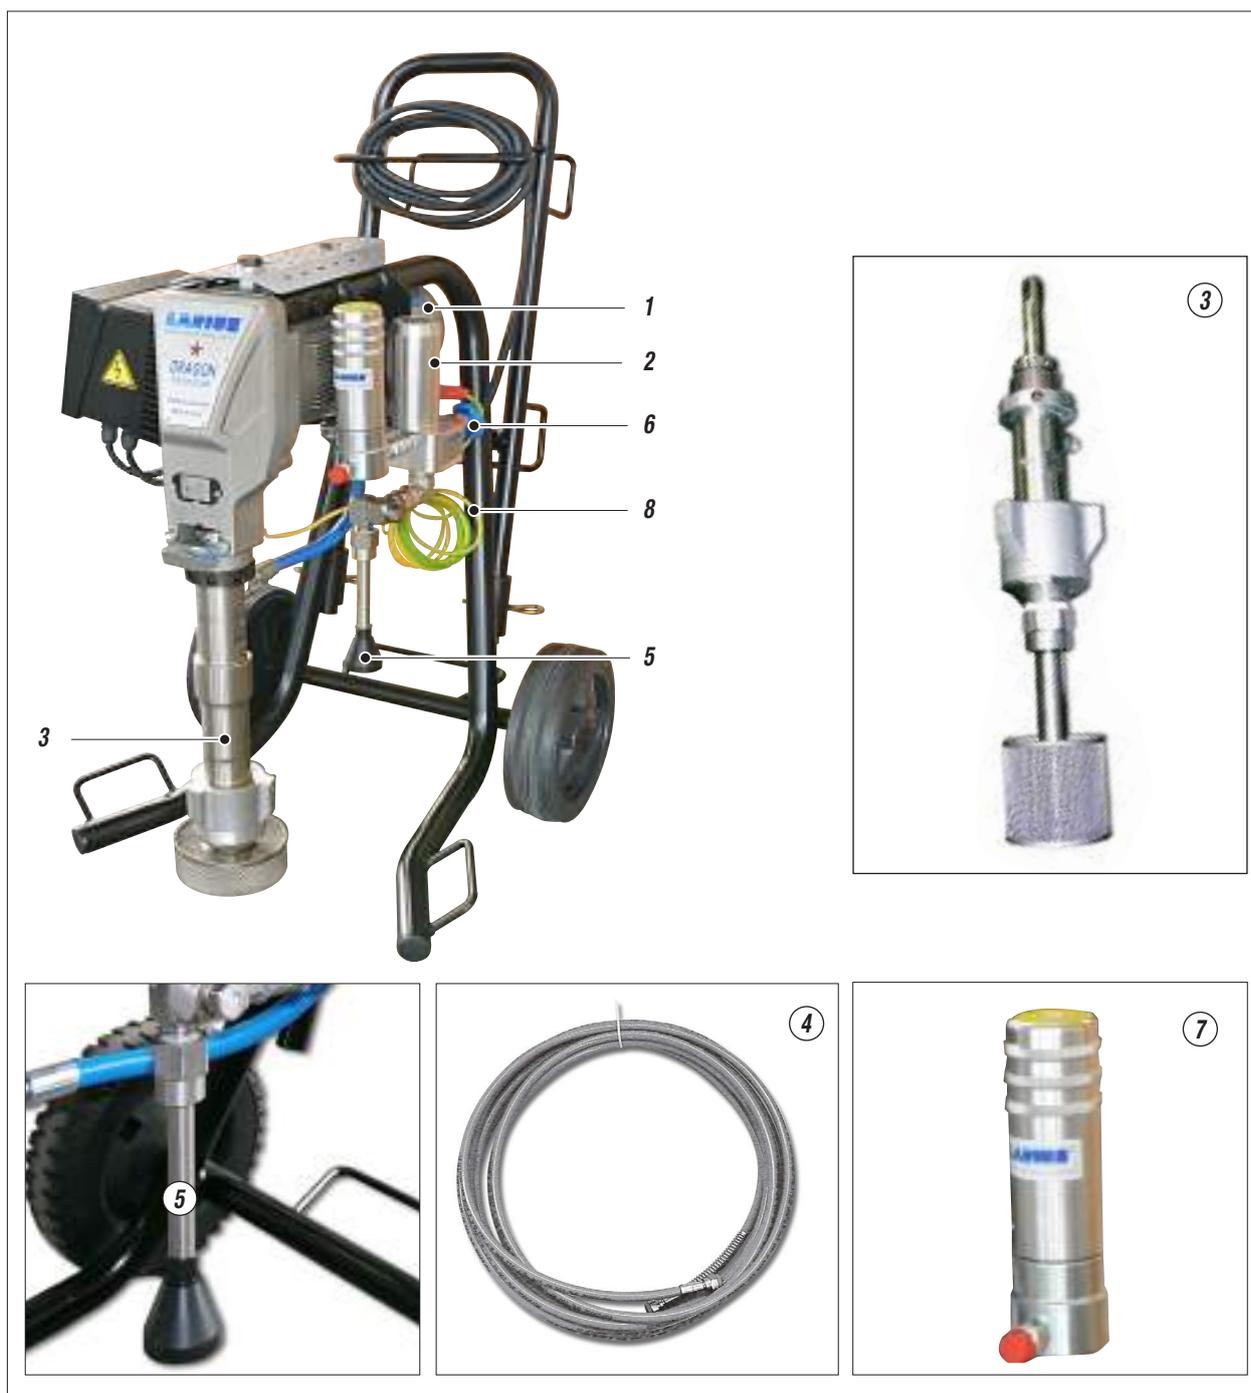


Fig. 1D

Pos.	Description
1	Electric motor
2	Pressure transmitter
3	Pumping group
4	High pressure flexible pipe of compensation Ø3/8"

Pos.	Description
5	Recirculation tube
6	Recirculation - safety valve
7	Line filter (optional)
8	Earth cable



Fig. 2D

Pos.	Description
9	Suction filter
10	Pressure gauge
11	Airless manual gun AT 300
12	Trigger safety clamp

Pos.	Description
13	Earth cable with clamp
14	Control equipment
15	ON/OFF switch
16	Flexible pipe connection



ALARM MESSAGES

When the product to be applied is finished the pump “sucks air” and automatically switches to the minimum number of cycles. The alarm messages function is described on the area sign (6).

Each time key (8) is pushed, the messages are displayed on the screen (7).



When an alarm message has been indicated the machine has to be switched off and on again using switch (1).

Each time the machine is switched off, the condensers remain charged for about 5 minutes. To avoid risk of shock, when removing the electrical box wait until the condensers have discharged altogether.



Fig. 3D

Pos.	Description
1	ON/OFF switch
2	Work pressure adjustment knob
3	Maximum pressure
4	Minimum pressure

Pos.	Description
5	Material circulation and machine washing position
6	Alarms
7	Message screen
8	Function keys

TABELLA FUNZIONI

Function symbol	Type of function	Description of function
P	Working pressure (bar)	Indicates the real time pressure used during the work cycle
J	Motor current (A)	Indicates the real time amperage on the equipment's motor during the work cycle
Pd	Pressure setting (bar)	Indicates the pressure set before the work cycle begins
c	Dissipator temp. (°C)	Indicates the dissipator temperature (in degrees Centigrade) during the work cycle
h	Working hours (h)	Indicates the total number of hours the equipment has worked

ALARM MESSAGE TABLE

Alarm symbol	Type of alarm	Cause	Solution
F1	Maximum current	The motor's current absorption is too high	Check the mechanical and hydraulic condition of the equipment. If necessary, take action
F2	Dissipator temp.	The dissipator temperature is too high	Check that the dissipator surfaces are clean and that the dissipator is properly ventilated
F3	Motor temp.	The motor temperature is too high	Check that the motor's heat dissipation surfaces are clean. Check that cooling ventilation is correct
F4	Maximum voltage	The voltage is too high	Check the connection to the electrical line and reinstate the correct nominal voltage
F5	Minimum voltage	The voltage is too low	Check the connection to the electrical line and reinstate the correct nominal voltage
F6	Earth connection	The earth connection is disconnected or non-existent	Check the earth cable and, if necessary, replace it. Make sure that the machine is earthed
F7	Pressure sensor missing	The pressure sensor is damaged or not fitted	Replace it
F8	Automatic switch-off during circulation phase (15 minutes)	The equipment is in cleaning mode	Wait until the equipment has stopped completely before using it for a new job

E TRANSPORT AND UNPACKING

- The packed parts should be handled as indicated in the symbols and markings on the outside of the packing.
- Before installing the equipment, ensure that the area to be used is large enough for such purposes, is properly lit and has a clean, smooth floor surface.
- The user is responsible for the operations of unloading and handling and should use the maximum care so as not to damage the individual parts or injure anyone. To perform the unloading operation, use only qualified and trained personnel (truck and crane operators, etc.) and also suitable hoisting equipment for the weight of the installation or its parts. Follow carefully all the safety rules. The personnel must be equipped with the necessary safety clothing.
- The manufacturer will not be responsible for the unloading operations and transport to the workplace of the machine.
- Check the packing is undamaged on receipt of the equipment. Unpack the machine and verify if there has been any damage due to transportation.

LIFTING POINTS

There are no precise lifting points for the machine in its entirety. In order to determine the most appropriate lifting points, refer to the geometric characteristics of the machine itself (*proceed as shown*).

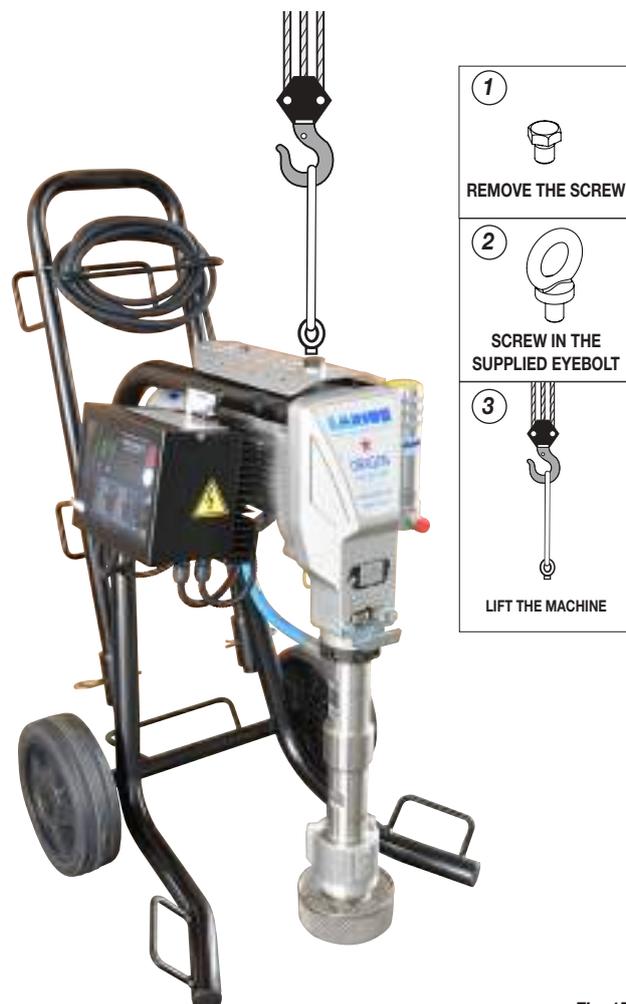


Fig. 1E



In case of damage, call immediately LARIUS and the Shipping Agent. All the notices about possible damage or anomalies must arrive timely within 8 days at least from the date of receipt of the plant through Registered Letter to the Shipping Agent and to LARIUS.



The disposal of packaging materials is a customer's competence and must be performed in accordance with the regulations in force in the country where the plant is installed and used. It is nevertheless sound practice to recycle packaging materials in an environment-friendly manner as much as possible.

F CONDITIONS OF GUARANTEE



The conditions of guarantee do not apply in the following situations:

- improper washing and cleaning of components causing malfunction, wear or damage to the equipment or any of its parts;
- improper use of the equipment;
- use that does not conform with applicable national legislation;
- incorrect or faulty installation;
- modifications, interventions and maintenance that have not been authorised by the manufacturer;
- use of non-original spare parts or parts that do not correspond to the specific model;
- total or partial non-compliance with the instructions provided.

G SAFETY RULES



Read carefully and entirely the following instructions before using the product. Please save these instructions in a safe place.



The unauthorised tampering/replacement of one or more parts composing the machine, the use of accessories, tools, expendable materials other than those recommended by the manufacturer can be a danger of accident.



The manufacturer will be relieved from tort and criminal liability.

- THE EMPLOYER SHALL TRAIN ITS EMPLOYEES ABOUT ALL THOSE RISKS STEMMING FROM ACCIDENTS, ABOUT THE USE OF SAFETY DEVICES FOR THEIR OWN SAFETY AND ABOUT THE GENERAL RULES FOR ACCIDENT PREVENTION IN COMPLIANCE WITH INTERNATIONAL REGULATIONS AND WITH THE LAWS OF THE COUNTRY WHERE THE PLANT IS USED.

- THE BEHAVIOUR OF THE EMPLOYEES SHALL STRICTLY COMPLY WITH THE ACCIDENT PREVENTION AND ALSO ENVIRONMENTAL REGULATIONS IN FORCE IN THE COUNTRY WHERE THE PLANT IS INSTALLED AND USED.
- KEEP YOUR WORK PLACE CLEAN AND TIDY. DISORDER WHERE YOU ARE WORKING CREATES A POTENTIAL RISK OF ACCIDENTS.
- ALWAYS KEEP PROPER BALANCE AVOIDING UNUSUAL STANCE.
- BEFORE USING THE TOOL, ENSURE THERE ARE NOT DAMAGED PARTS AND THE MACHINE CAN WORK PROPERLY.
- ALWAYS FOLLOW THE INSTRUCTIONS ABOUT SAFETY AND THE REGULATIONS IN FORCE.
- KEEP THOSE WHO ARE NOT RESPONSIBLE FOR THE EQUIPMENT OUT OF THE WORK AREA.
- **NEVER** EXCEED THE MAXIMUM WORKING PRESSURE INDICATED.
- (IF PROVIDED) **NEVER** POINT THE SPRAY GUN AT YOURSELVES OR AT OTHER PEOPLE. THE CONTACT WITH THE CASTING CAN CAUSE SERIOUS INJURIES.
- IN CASE OF INJURIES CAUSED BY THE GUN CASTING, SEEK IMMEDIATE MEDICAL ADVICE SPECIFYING THE TYPE OF THE PRODUCT INJECTED. **NEVER** UNDERVALUE A WOUND CAUSED BY THE INJECTION OF A FLUID.
- ALWAYS DISCONNECT THE SUPPLY AND RELEASE THE PRESSURE IN THE CIRCUIT BEFORE PERFORMING ANY CHECK OR PART REPLACEMENT OF THE EQUIPMENT.
- NEVER MODIFY ANY PART IN THE EQUIPMENT. CHECK REGULARLY THE COMPONENTS OF THE SYSTEM. REPLACE THE PARTS DAMAGED OR WORN.
- (IF PROVIDED) TIGHTEN AND CHECK ALL THE FITTINGS FOR CONNECTION BETWEEN PUMP, FLEXIBLE HOSE AND SPRAY GUN BEFORE USING THE EQUIPMENT.
- ALWAYS USE THE FLEXIBLE HOSE SUPPLIED WITH STANDARD KIT.
- THE USE OF ANY ACCESSORIES OR TOOLING OTHER THAN THOSE RECOMMENDED IN THIS MANUAL, MAY CAUSE DAMAGE OR INJURE THE OPERATOR.
- THE FLUID CONTAINED IN THE FLEXIBLE HOSE CAN BE VERY DANGEROUS. HANDLE THE FLEXIBLE HOSE CAREFULLY. DO NOT PULL THE FLEXIBLE HOSE TO MOVE THE EQUIPMENT. NEVER USE A DAMAGED OR A REPAIRED FLEXIBLE HOSE.



The high speed of travel of the product in the hose can create static electricity through discharges and sparks. It is suggested to earth the equipment. The pump is earthed through the earth cable of the supply.



The gun is earthed through the high pressure flexible hose.

All the conductors near the work area must be earthed.

Never spray over flammable products or solvents in closed places.



Never use the tooling in presence of potentially explosive gas.



Always check that the product is compatible with the materials composing the equipment (*pump, spray gun, flexible hose and accessories*) with which it can come into contact. Never use paints or solvents containing Halogen Hydrocarbons (as the *Methylene Chloride*). If these products come into contact with aluminium parts can provoke dangerous chemical reactions with risk of corrosion and explosion.



Avoid approaching too much to the pump piston rod when the pump is working or under pressure. A sudden movement of the piston rod can cause wounds or finger squashing.



ELECTRICAL SAFETY PRECAUTIONS

- Check the switch is on the "OFF" position before connecting the cable to the mains.
- Never carry a plugged-in equipment.
- Disconnect the equipment before storing it and before performing any maintenance operation or replacing of accessories.
- Do not carry the equipment neither unplug it by pulling the electric cable.
- Protect the cable from heat, oil and sharp edges.
- When the tool is used outdoors, use only an extension cable suited for outdoor use and so marked.



Never attempt to tamper with the calibre of instruments.

- Take care when the pumping rod is moving. Stop the machine whenever someone is within its vicinity.
- Repairs of the electrical equipment should only be carried out by skilled personnel, otherwise considerable danger to the user may result.

H SETTING-UP

CONNECTION OF THE FLEXIBLE HOSE TO THE GUN

- Connect the high pressure flexible hose (**H1**) to the pump (**H2**) and to the gun (**H3**), ensuring to tighten the fittings (*the use of two wrenches is suggested*). **NEVER** use sealants on fittings' threads. It is **ADVISED** to mount a high pressure manometer at the pump outlet (*see on page "Accessories"*) to read the product pressure.
- It is recommended to use the hose provided with the standard kit (ref. 18036). **NEVER** use a damaged or a repaired flexible hose.



Fig. 1H

CHECK ON POWER SUPPLY



Make sure that the electrical system is earthed and complies with regulations.

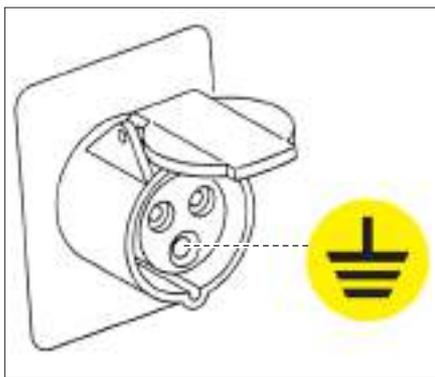


Fig. 2H

- Check the mains voltage corresponds to the equipment's rating.
- The supply cable is provided without plug. Use a plug which guarantees the plant earthing. Only a technician or a skilled person should perform the connection of the plug to the electric cable.

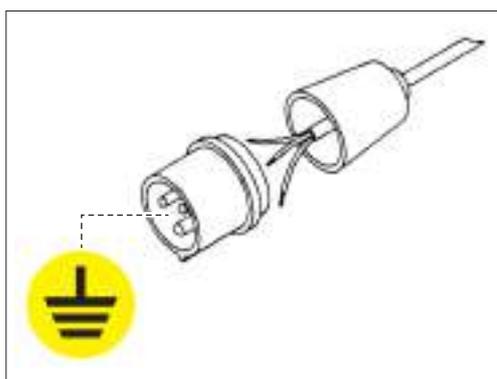


Fig. 3H




Should anyone use an extension cable between the tooling and the socket, it must have the same characteristics as the cable supplied (*minimum diameter of the wire 4 mm²*) with a maximum length of 50 mt. Higher lengths and lower diameters can provoke excessive voltage falls and also an anomalous working of the equipment.

DRAGON equipment is fitted with an additional external earth cable that is connected to the stem on the pump unit by means of a specific clamp (H4), in order to protect the operator against any risk of static or electric shock.

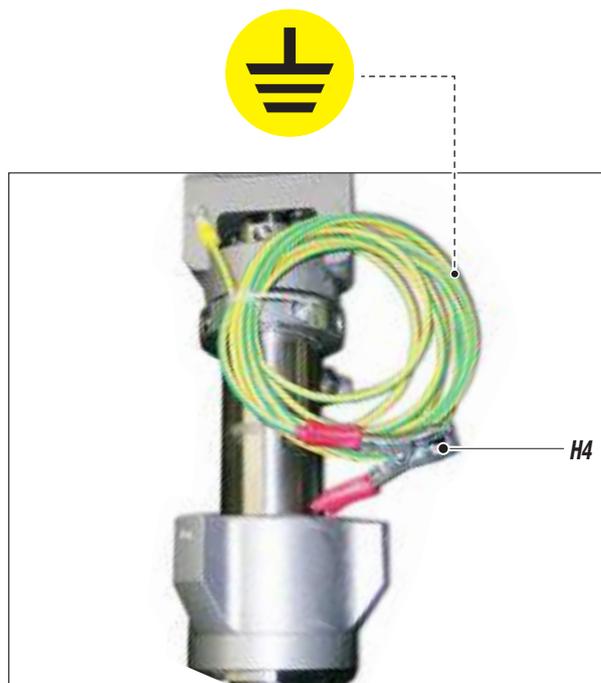


Fig. 4H

To avoid electric shock when disassembling or checking the electronic equipment, wait 5 minutes after having disconnected the power supply cable, so that the electricity stored in the condensers while working can be dissipated.

Also check the condition of the earth cable to avoid any risk of shock.





Before carrying out any checks on the machine (*maintenance, cleaning, or replacing parts*) switch off the machine and wait until it has stopped altogether.

While checking stay away from electrical or moving parts to avoid any risk of shock or crushing of hands.

WARNING :

- **DO NOT** modify the plug for the earth socket in any way.
- **ONLY** use electrical connections that are earthed.
- **Make sure** that any earth extension cords are in good condition.
- **ONLY** use three-core extension cables.
- **Avoid direct contact with the rain.** Keep the equipment in a dry place.







CONNECTION OF THE TOOLING TO THE POWER SUPPLY

 Before connection up the power supply to the equipment, make sure that the electrical system is earthed and complies with regulations.

 Make sure that the clamp (H4) provided is positioned correctly, in order to earth the pump unit in the equipment properly.

- Check the switch (H5) is on the “OFF” (0) position before connecting the cable to the mains.
- Place the pressure control knob (H6) on the “MIN” position (turn counterclockwise).

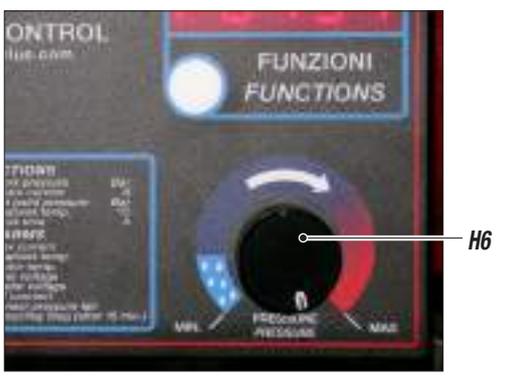
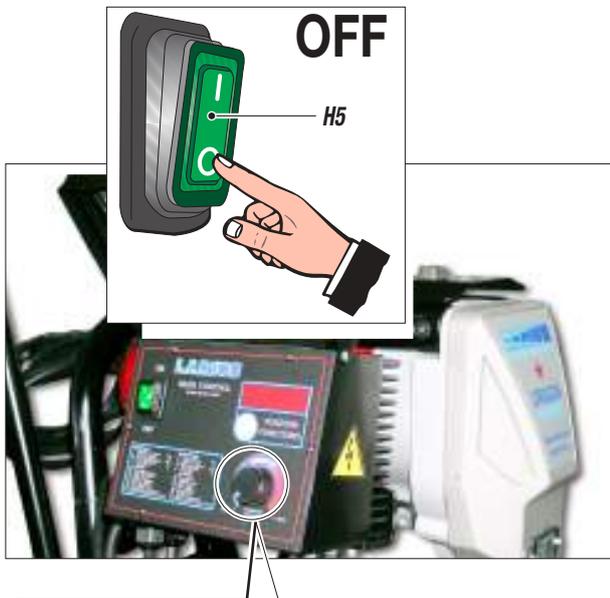


Fig. 5H

WASHING OF THE NEW EQUIPMENT

- The equipment has already been adjusted at our factory with light mineral oil left inside the pumping group as protection. Therefore, wash with diluent before sucking the product.

- Lift the suction unit and immerse it in the bucket that contains the washing liquid.
- Connect the clamp (H4) provided is positioned correctly, in order to earth the pump unit in the equipment properly.



Fig. 6H

- Ensure the gun is without nozzle (H3).



Fig. 7H

- Press the switch (H5) of the equipment “ON” (I).



Fig. 8H



- Turn the pressure setting knob (H6) clockwise to the "CIRCULATION & WASHING" position (drop symbol).

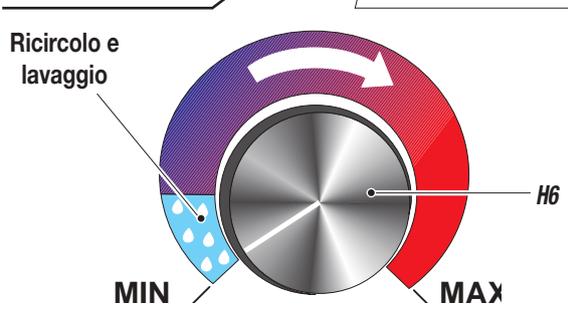


Fig. 9H



Hold the spray gun against the edge of the metal contained (H7).

- Point the spray gun into the collection container (H7) and hold the trigger down (in order to expel the oil contained) until clean liquid flows out. Now, release the trigger.



Use a metal container (H7).
To avoid any risk of electric shock connect the collection container to a surface that is earthed (e.g. concrete) and not to surfaces that will insulate the container from the earth.



- Remove the suction hose and remove the bucket of cleaning liquid.
- Now point the spray gun (H8) into the container (H7) and press the trigger to recover any cleaning liquid left.
- As the pump idles, press the "OFF" (0) switch (H5) to stop the tooling. When this is complete, release the trigger.



Fig. 10H



Absolutely avoid to spray solvents indoors. In addition, it is recommended to keep away from the pump in order to avoid the contact between the solvent fumes and the electric motor.



For disposing of the washing liquid, see the requirements laid down in the Standards in force in the country in which the equipment is used and act accordingly.

The Client is solely responsible for any irregular action taken before, during, or after disposing of washing liquid, or in interpreting and applying the current Standards in this regard.

- Now the machine is ready. When water-based paint has been used, in addition to washing using the cleaning liquid, we recommend washing with soapy water and then clean water.

PREPARING THE PRODUCT



MAKE SURE THE PRODUCT IS SUITABLE TO BE USED WITH AN AIRLESS SPRAY GUN.

- Mix and filter the product before using it.



Make sure the product to be used is compatible with the materials employed for manufacturing the equipment (stainless steel and aluminium). Because of that, please contact the supplier of the product.

Never use products containing halogen hydrocarbons (as *methylene chloride*). If these products come into contact with aluminium parts of the equipment, can provoke dangerous chemical reactions with risk of explosion.



REMOVE THE FILTER (H9) FOR DENSE PRODUCTS.



Fig. 11H

I WORKING

START OF THE WORKING OPERATIONS



Make sure that the electrical system is earthed and complies with regulations.
Make sure that the earth clamp is positioned correctly to ensure a safe earth on the pump unit.

- Use the tooling after performing all the **SETTING UP** operations above described.
- Dip the suction pipe (I1) into the product tank.



Fig. 11

- Open the recirculation - safety valve (12).



Fig. 21

- Press the switch (13) of the equipment "ON" (1).

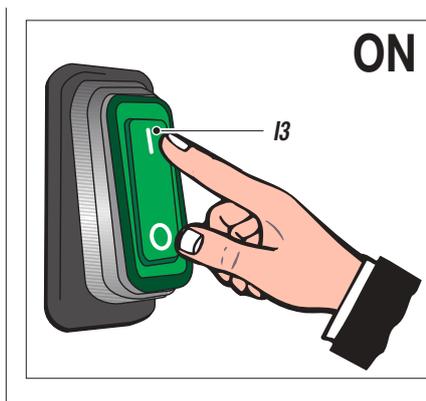


Fig. 31

- Turn the pressure setting knob (14) clockwise to the "CIRCULATION & WASHING" position (drop symbol).

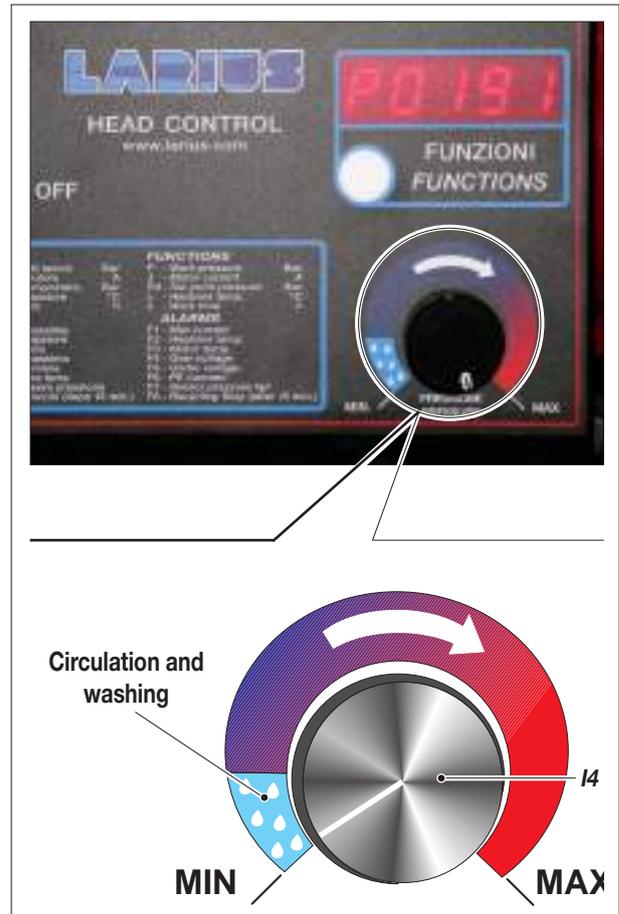


Fig. 41

- Make sure that the product circulates regularly from the circulation hose (15).
- Close the recirculation - safety valve (12).



Fig. 51

- The machine continues to suck up product until it has filled the hose as far as the spray gun, after which it will automatically stop when the set pressure is reached.



SPRAY ADJUSTMENT

- Slowly turn clockwise the pressure control knob (14) to reach the pressure value in order to ensure a good atomization of the product.



Fig. 61

- An irregular and marked spray on the sides indicates a low working pressure. On the contrary, a too high pressure causes a high fog (“overspray”) and waste of product.
- In order to avoid overthickness of paint, let the gun advance sideways (*right-left*) when spraying.
- Always paint with regular parallel bands coats.
- Keep a safety and constant distance between the gun and the support to be painted and also keep yourselves perpendicular to it.

NEVER point the spray gun at yourselves or at other people. The contact with the casting can cause serious injuries.

In case of injuries caused by the gun casting, seek immediate medical advice specifying the type of the product injected.

Safety valve: when working at the maximum pressure available, releasing the gun trigger sudden increases of pressure can occur. In this case, the safety valve (15) opens automatically eliminating part of the product from the recirculating tube (16). Then it closes so as to go back to the first working conditions.

The valve (15) serves two purposes:

- Safety: It opens the passage at pressure peaks exceeding 280÷300 bar;
- Regulation: It returns the working pressure to 230 bar and levels out the hydraulic operating hysteresis.



Fig. 71

J CLEANING AT THE END OF THE WORK

CLEANING FOR SOLVENT-BASED PRODUCTS



Make sure that the electrical system is earthed and complies with regulations.

- Reduce pressure to the minimum (turn counterclockwise the pressure control knob (J1)).
- Press the switch (J2) "OFF (0)" placed on the box of the electric motor, to stop the equipment.



Fig. 1J

- Hold the spray gun trigger down.
- Open the recirculation - safety valve (J3) to release the pressure in the circuit.



Fig. 2J

- Lift the suction hose and replace the bucket containing the product with a bucket of cleaning liquid (make sure it is compatible with the product you are using).
- Unscrew the nozzle on the spray gun (remember to clean it with cleaning liquid).
- Press the switch (J2) "ON" (I) of the equipment.



Fig. 3J



- Turn the pressure setting knob (J1) clockwise to the “CIRCULATION & WASHING” position (drop symbol).
- Close the recirculation - safety valve (J3).

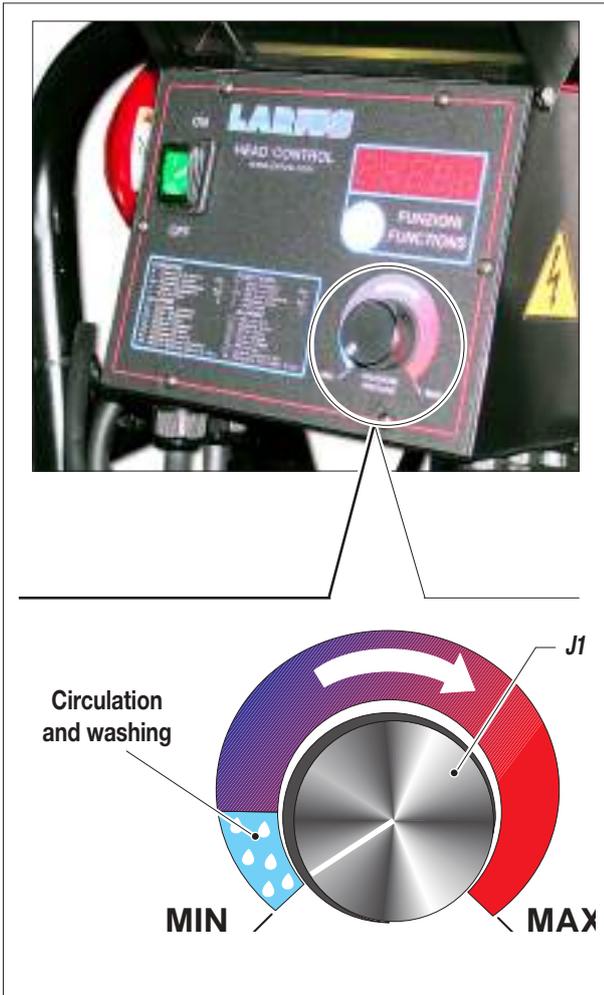


Fig. 4J

- Make sure that the product circulates through the circulation hose.

 Make sure that the machine sucks in clean washing liquid. Allow the cleaning liquid to discharge into another container and do not mix it with the cleaning liquid still to be used. We recommend circulating the cleaning liquid for at least 15 minutes.

 For disposing of the washing liquid, see the requirements laid down in the Standards in force in the country in which the equipment is used and act accordingly. The Client is solely responsible for any irregular action taken before, during, or after disposing of washing liquid, or in interpreting and applying the current Standards in this regard.



Fig. 5J

- Point the spray gun (J4) into the container (J5) used to collect the cleaning liquid and hold the trigger down to expel any product remaining, until clean liquid flows out. Now, release the trigger.

 Hold the spray gun against the edge of the metal contained (J5).

 Use a metal container (J5). To avoid any risk of electric shock connect the collection container to a surface that is earthed (e.g. concrete) and not to surfaces that will insulate the container from the earth.

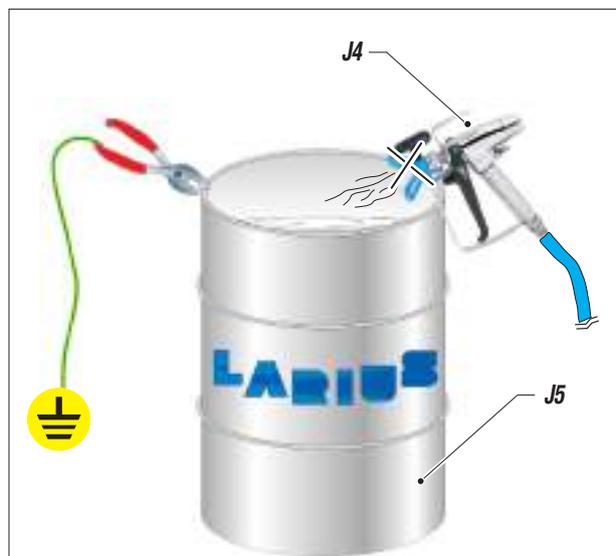


Fig. 6J

- Lift the suction hose and remove the bucket of cleaning liquid.
- Now point the spray gun (J4) into the container (J5) and press the trigger to recover any cleaning liquid left.

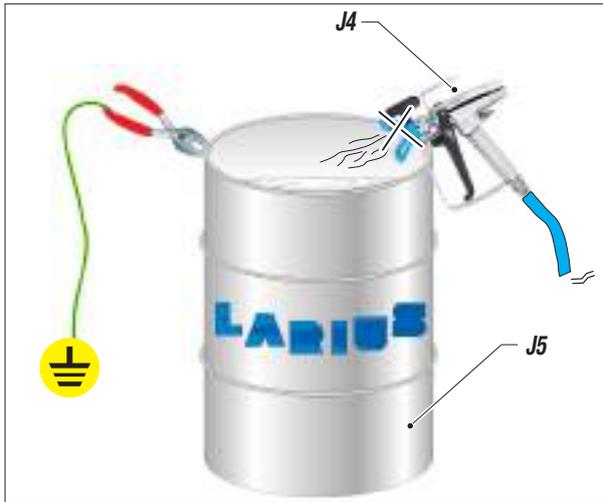


Fig. 7J

- As the pump idles, press the “OFF” (0) switch (J2) to stop the tooling.



Fig. 8J

- In case of long storage, we recommend you to suck and to leave light mineral oil inside the pumping group and the flexible hose.



Follow the washing procedure before using again the equipment.

- Take the cleaning liquid and store it in suitable containers.



Make sure that the machine sucks in clean washing liquid. Allow the cleaning liquid to discharge into another container and do not mix it with the cleaning liquid still to be used. We recommend circulating the cleaning liquid for at least 15 minutes.

CLEANING FOR WATER-BASED PRODUCTS



Make sure that the electrical system is earthed and complies with regulations.

- Reduce pressure to the minimum (turn counterclockwise the pressure control knob (J1)).



Fig. 9J

- Press the switch (J2) “OFF (0)” placed on the box of the electric motor, to stop the equipment.



Fig. 10J

- Hold the spray gun trigger down.
- Open the circulation - safety valve (J3) to discharge the pressure in the circuit.



Fig. 11J

- Lift the suction hose and replace the bucket of product with an empty bucket (J6).
- Connect a rubber hose (J7) to a water tap (J8) and fill the bucket (J6).
- Position an empty bucket to collect the water (J9) under the circulation hose (J10).



Fig. 12J

- Press the switch (J2) su ON (I) and turn a little the pressure control knob (J1) clockwise so as the machine works till the motor starts.

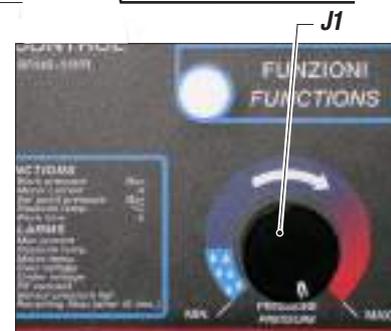
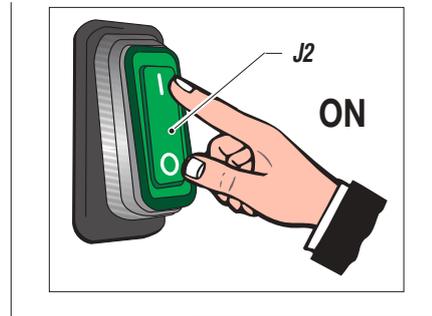


Fig. 13J

- Run the pump's washing cycle until clean water flows out of the circulation hose (J10).
- Close the recirculation - safety valve (J3).



Fig. 14J

- Remove the suction hose and the rubber hose (J7) and take away the bucket of water (J6).
- Now point the spray gun (J4) into the container (J5) and press the trigger to recover any cleaning liquid left.



Fig. 15J

- As the pump idles, press the "OFF" (0) switch (J2) to stop the tooling.

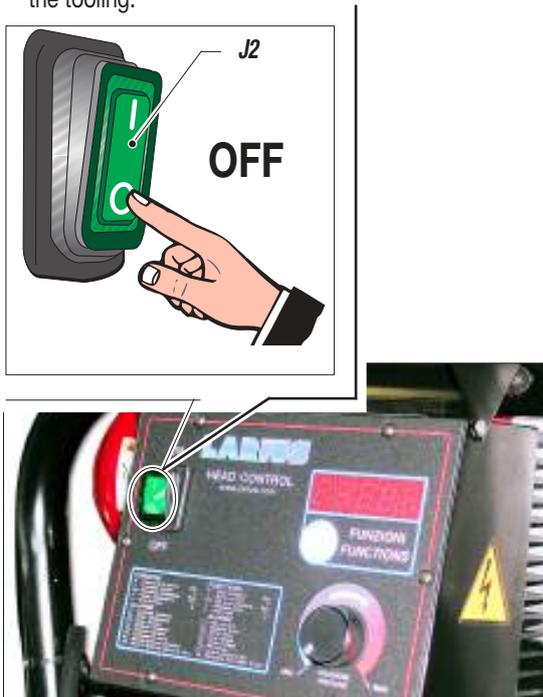


Fig. 16J

- In case of long storage, we recommend you to suck and to leave light mineral oil inside the pumping group and the flexible hose.



Follow the washing procedure before using again the equipment.



If the equipment is to be stopped for a lengthy period of time, carry out the cleaning operations described previously, according to the type of product used. In case of short stoppages, suck in some water and leave the pump unit in the bucket (J6) for a few minutes.

K ROUTINE MAINTENANCE

CHECK ON THE PACKING NUT

The gaskets do not need adjusting. The ring nut is only used to fit and remove gaskets and for topping up the oil.



Always disconnect the electrical supply and discharge the pressure in the pump unit (*open the discharge valve*) before carrying out any maintenance.

Wait 30 seconds before proceeding with maintenance operations to allow any residual electricity to be discharged.

- Use the lubricant (K1) provided (*ref. 16340*) to make it easier to slide the piston inside the seal pack and to substitute the air with oil.



At the start of each working day check that the ring nut is full of hydraulic oil (Ref. 16340). This oil makes it easier for the piston to slide and prevents any material that escapes via the seal gasket drying when the equipment is stopped.



Fig. 1K



- The ring nut (K2) must be tightened all the way. Every 100 working hours, with the pressure at 0 bar, check that it is tightened all the way.
- The supplied pin (K3 - ref. 20144) also serves the purpose of closing and opening the pump unit's locking ring-nut (K4). This ring nut must always be closed in order to act as a locking counter-nut.

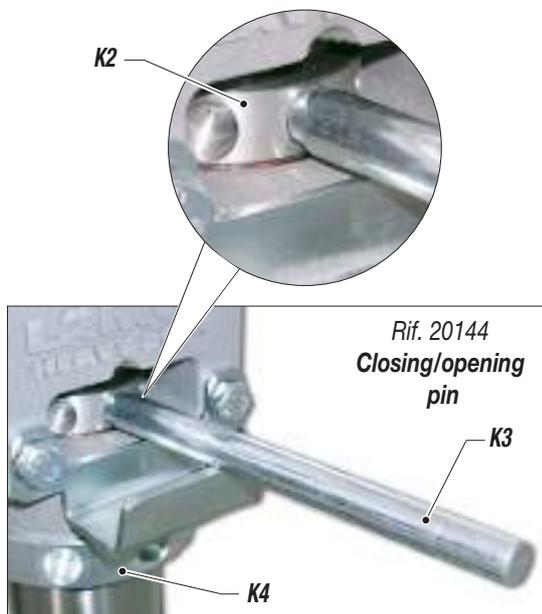


Fig. 2K

CHECKING THE HEAT EXCHANGE RADIATOR

Always keep the heat exchange radiator (K5) on the electronic control box clean, in order to guarantee correct heat exchange with the ambient air.

We suggest cleaning using a jet of compressed air.

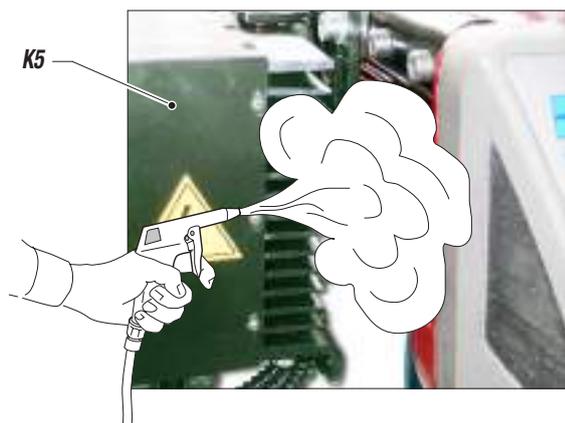


Fig. 3K

PRESSURE SWITCH SEAL CHECK

Check that no material is escaping from the safety hole (K6) at the bottom of the protective container.

If necessary, replace the O-Ring for the pressure sensor (K7).

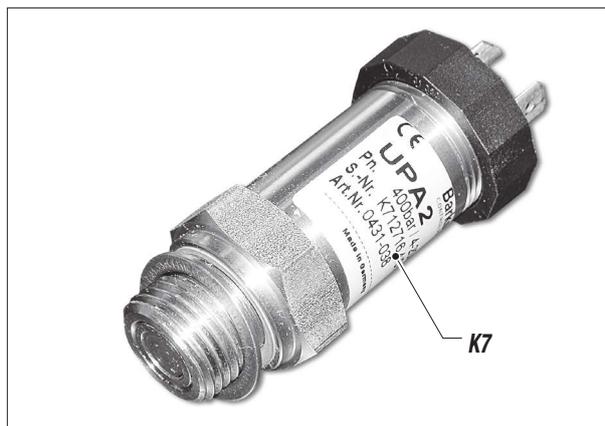


Fig. 4K

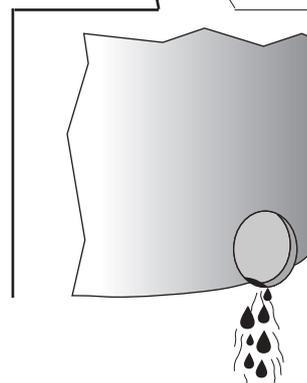


Fig. 5K



L PROBLEMS AND SOLUTIONS

Problem	Cause	Solution
The equipment does not start	Lack of voltage;	Check the correct connection to the power supply;
	Considerable drops in mains voltage;	Check the extension cable;
	On/Off switch disconnected;	Ensure the On/Off switch is on the "on" position and turn clockwise the pressure control knob;
	Breakdown of pressure transmitter;	Verify and replace it, if necessary;
	Breakdown of motor electric control box;	Verify and replace it, if necessary;
	The line of material coming out of the pump is already under pressure;	Open the drain valve to release pressure in the circuit;
	The product is solidified inside the pump;	Open the drain valve to release pressure in the circuit and stop the machine. Disassemble the pumping group and the pressure transmitter and clean;
The equipment does not suck the product	Suction filter clogged;	Clean or replace it;
	Suction filter too fine;	Replace it with a larger-mesh filter (with very dense products, remove the filter);
	The equipment sucks air;	Check the suction pipe;
The equipment sucks but does not reach the pressure desired	Lack of product;	Add the product;
	The equipment sucks air;	Check the suction pipe;
	The drain valve is open;	Close the drain valve;
	The gaskets of the pumping group are worn;	Replace the gaskets;
	Suction or delivery valve dirty;	Disassemble the pumping group;
When pressing the trigger, the pressure lowers considerably	Nozzle too big or worn;	Replace it with a smaller one;
	The product is too dense;	Dilute the product, if possible;
	The filter of the gun-but is too fine;	Replace it with a larger-mesh filter;
The pressure is normal but the product is not atomized	The nozzle is partially clogged;	Clean or replace it;
	The product is too dense;	Dilute the product, if possible;
	The filter of the gun-but is too fine;	Replace it with a larger-mesh filter;
The atomization is imperfect	The nozzle is worn;	Replace it;



Problem	Cause	Solution
When releasing the trigger of the gun, the equipment does not stop (the motor runs slowly and the piston rod keeps on going up and down)	The gaskets of the pumping group are worn;	Replace the gaskets;
	Suction or delivery valve dirty;	Disassemble the pumping group and clean;
	Drain valve defective;	Verify and replace it, if necessary;
Material escaping from the cap	Material leaking from the O-Ring.	Replace the O-Ring.



Always close the air compressed supply and unload the plant pressure before performing any check or replacement of pump parts (see "correct procedure of decompression").

M CORRECT PROCEDURE OF DECOMPRESSION



Make sure that the electrical system is earthed and complies with regulations.

- Zero the pressure regulator knob.
- Move the switch (M1) to the OFF (0) position to stop the equipment.

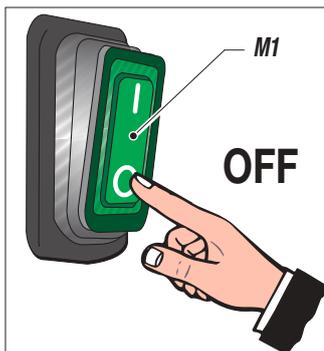


Fig. 1M

- Open the circulation - safety valve (M2) to discharge the residual pressure, always turning it anticlockwise.



Fig. 2M

- Point the gun at the tank (M3) of the product and press the trigger to release pressure. At the end of the operation, insert the gun clamp (M4).



Fig. 3M

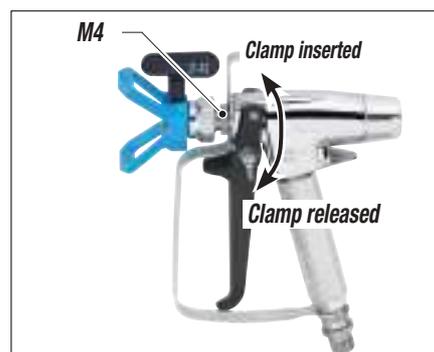


Fig. 4M



WARNING :

If the equipment is still under pressure after performing the operations above described because of the nozzle or the flexible hose clogged, proceed as follows:

- Loosen very slowly the gun nozzle.
- Release the clamp.
- Point the gun at the container of the product and press the trigger to release pressure.
- Loosen very slowly the fitting of connection from the flexible hose to the gun.
- Clean or replace the flexible hose and the nozzle.

N REPLACEMENT OF THE PUMPING GROUP'S GASKETS

Each time you use the machine, check for material leaking from the top of the ring nut.

If any material leaks out when the pump is working at the set pressure, proceed as follows:

- Carry out this operation after cleaning the tooling.



Always disconnect the power supply and release pressure before going on with the operations (follow the "correct procedure of decompression").



The gaskets are self-adjusting. If a leak occurs they must be replaced.

- Disconnect the product feed hose (N1) from the pump unit by unscrewing the nut (N2).
- Unscrew the fixing ring nut (N3) using the relevant closing pin (Ref. 20144).

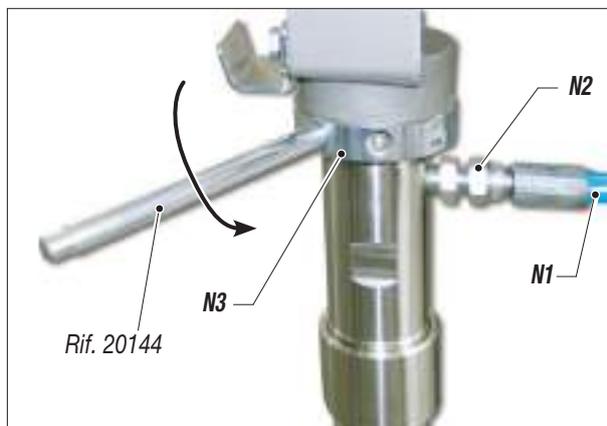


Fig. 1N

- Release the plastic cover (N4).

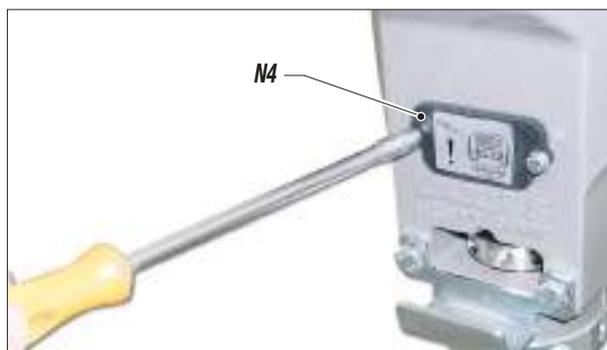


Fig. 2N

- Turn the motor (N6) with a screwdriver (N5) until the piston rod has moved to the lowest point of its stroke.

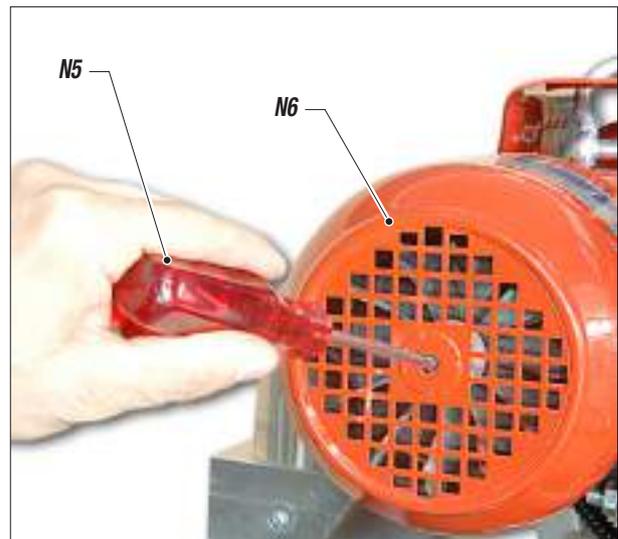


Fig. 3N

- Screw the appropriate supplied tool (N7 – ref- 20213) into the threaded hole on the holding pin (N8).

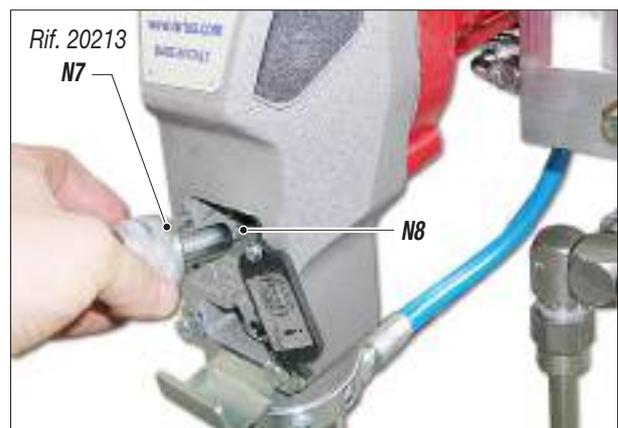


Fig. 4N

- Remove the pin (L8) from its seating.



Fig. 5N

- Unscrew the pump unit (N9) from the frontal flange (N10).



Fig. 6N

PIT STOP MAINTENANCE

Replacement of upper and lower gaskets 20 minutes.

- Lock the pump unit into a vice and unscrew it with a 50mm wrench;
- Release the pump unit from the body of the suction valve;



Fig. 7N

Lower seal

- Remove the piston stem (N11) and remove the pump unit sleeve (N12);



Fig. 8N

- Grip the stem valve (N13) in a vice;

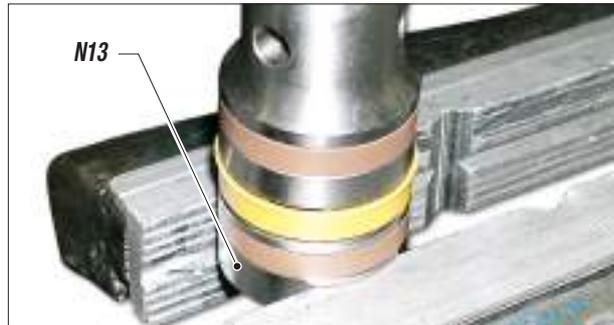


Fig. 9N

- Use a size 24 spanner to unscrew the lower stem (N14);

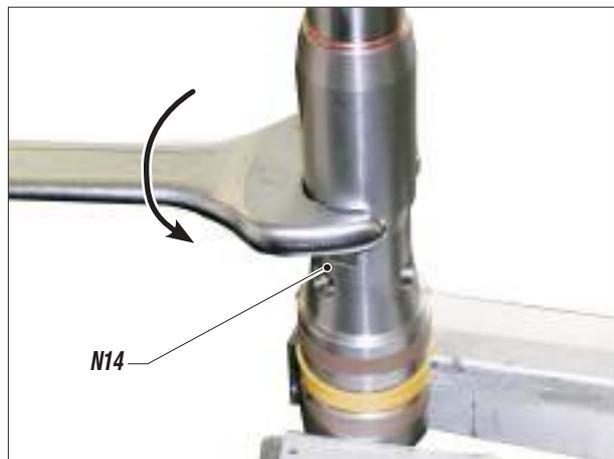


Fig. 10N

- Use a screwdriver to remove the two open-ring guide bands (N15) and replace them;

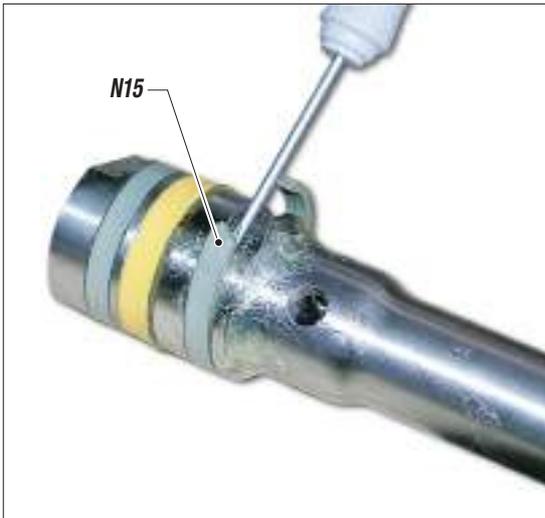


Fig. 11N

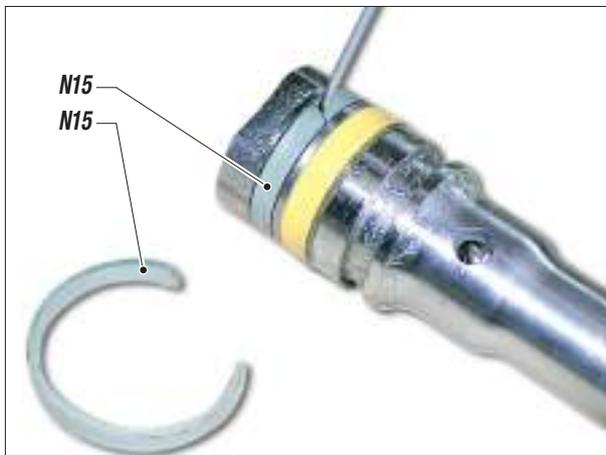


Fig. 12N

- Unscrew the stem valve (N16) altogether, check the surface of the ball seating (N17) that comes into contact with the ball (N18). If worn, replace them;



Fig. 13N

- Use a screwdriver to remove the O-Ring (N19) and replace it making sure it is aligned correctly (as illustrated);



Fig. 14N

- Screw the valve stem (N16) (Ref. 20139) on again and tighten fully, gripping the valve in a vice. To tighten, use a 22 mm spanner; the use of a thread paste is recommended;

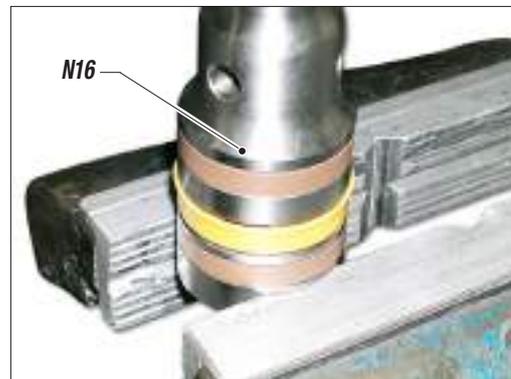


Fig. 15N

Upper seal

- Remove the ring nut (N20);



Fig. 16N

- Remove the ring (N21);



Fig. 17N

- Remove the guide band (N22) with a screwdriver and replace it with a new one;



Fig. 18N

- Remove the seal (N23) with a screwdriver;



Fig. 19N

- Using a screwdriver, remove the second band (N24) located below the seal (N23) and insert a new band in the same position;



Fig. 20N



The positioning of the seal (N23) requires special care during assembly.

- Assist insertion by applying leverage to the outside of the ring (N23), pushing from the outside inwards and helping the ring to lodge in the seating, while being careful not to damage the ring's contact surfaces.



Lubricate with grease before fitting.

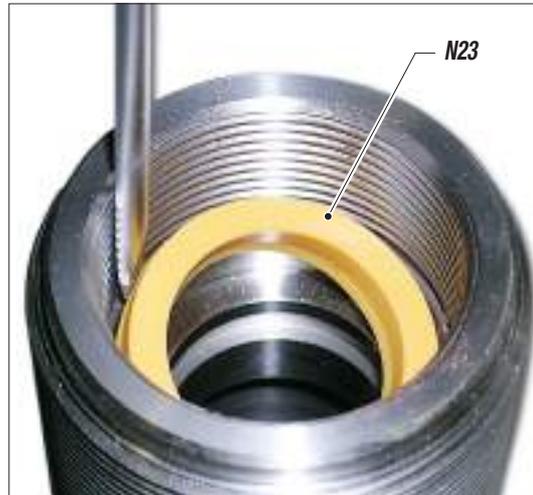


Fig. 21N

- Remove the OR (N25-N26-N28) from the body of the foot valve (N29) and from the ball seat holder (N27) and, if necessary, replace them. Reassemble the components in their proper order (as indicated in the diagram);

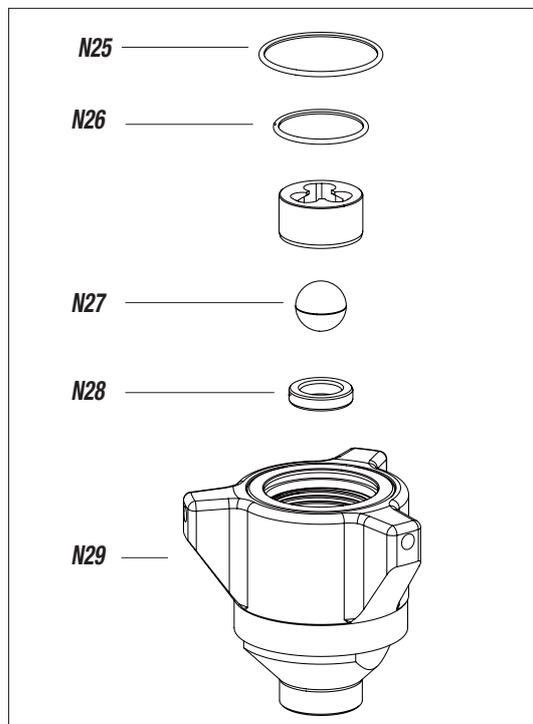


Fig. 22N



To facilitate fitting the O-ring (N28) it is advisable to warm it slightly with a blast of hot air.



Fig. 23N



The ball seating (N17) is countersunk on one side, where the ball (N18) must sit.

- Screw the locking ring nut (N20) back onto the body of the pump unit until it makes contact, then loosen it by one turn;



Fig. 24N

- Remove the sleeve/cylinder seal (N30) and replace it with a new one;



Fig. 25N

- Check the wear status of the surfaces inside the jacket. Replace it if necessary;
- Grease the sleeve (N31) using a paintbrush;



Fig. 26N

- Insert the sleeve (N31) into the lower pump unit (N32);



Fig. 27N



Insert the complete piston stem (N33) after greasing the gaskets (N34);

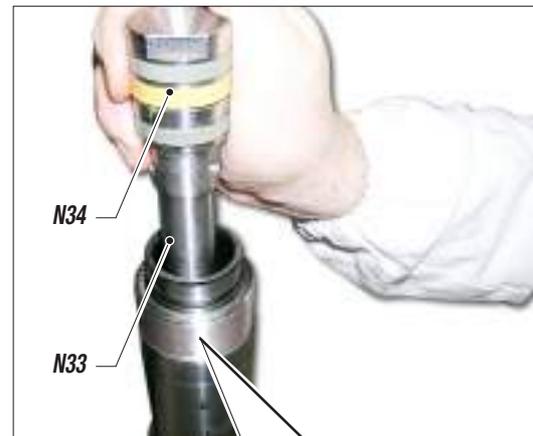


Fig. 28N



- Screw on the complete foot valve (N29) with the sleeve assembly (N30);



In order to guarantee a proper seal, tighten the foot valve (N29) fully, using a 50 mm spanner.

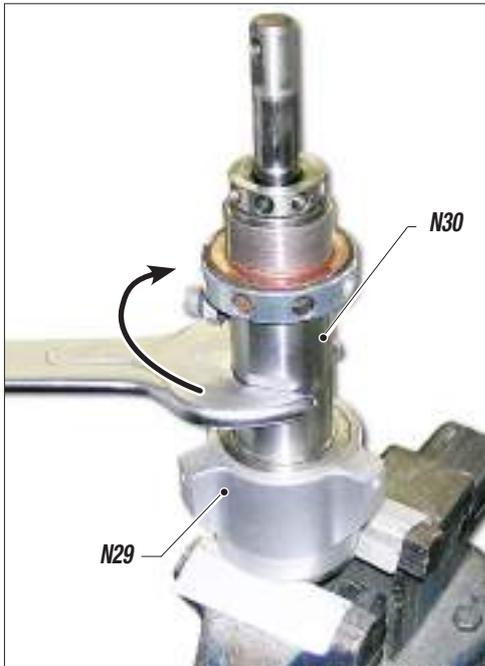


Fig. 29N

- When refitting the pump unit on the machine, the stem must be at its highest point possible.
- Insert the stem into the connecting rod and insert the fixing pin (N8).

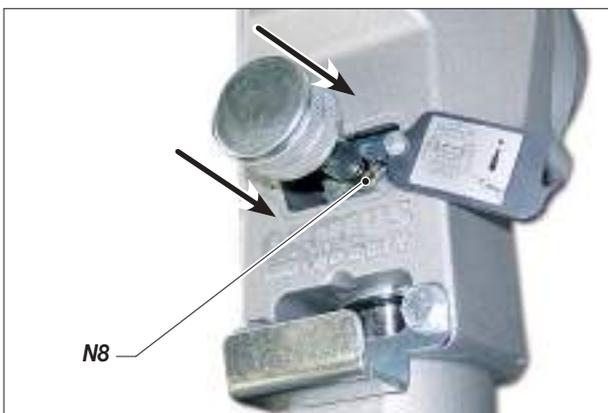


Fig. 30N

- Tighten the pump casing all the way and, if the delivery pipe is not correctly aligned, unscrew the pump casing until the connection is in the correct position before tightening by using the ring nut (N35) and the pin (N36) supplied (Ref. 20144).

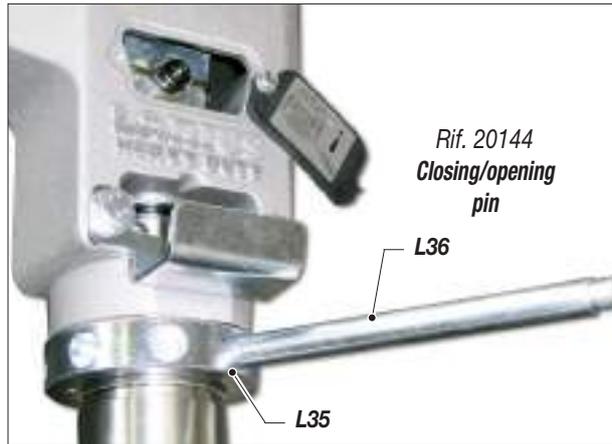


Fig. 31N

- Close the seal ring nut (N37) all the way.



Fig. 32N

- Lubricate the upper crown (N38) using oil (N39) (Ref. 16340);



Fig. 33N

- Refit the inspection barrier (N40);



Fig. 34N

- To assemble all the parts in the correct sequence, see the exploded diagram on page 34.



SPARE PARTS

Z Electric motor
pag. 54

O Complete electro-mechanical Unit
Page 32

S Basic hydraulic block
ref. 30400
Page 40

V Electrical control - exploded view
Page 44



W Liner type machines
Page 45

X Petrol-powered
Dragon Page 48

U Carriage
page 43

Y High pressure gun
"AT 300"
Page 52

AB Accessories
page 56

AC Versions
page 62

P Complete rigid pumping element
Page 34

Q Complete short pumping element
Page 36

R Complete long pumping element
Page 38

T Circulation system unit
Page 42



0 COMPLETE ELECTRO-MECHANICAL UNIT

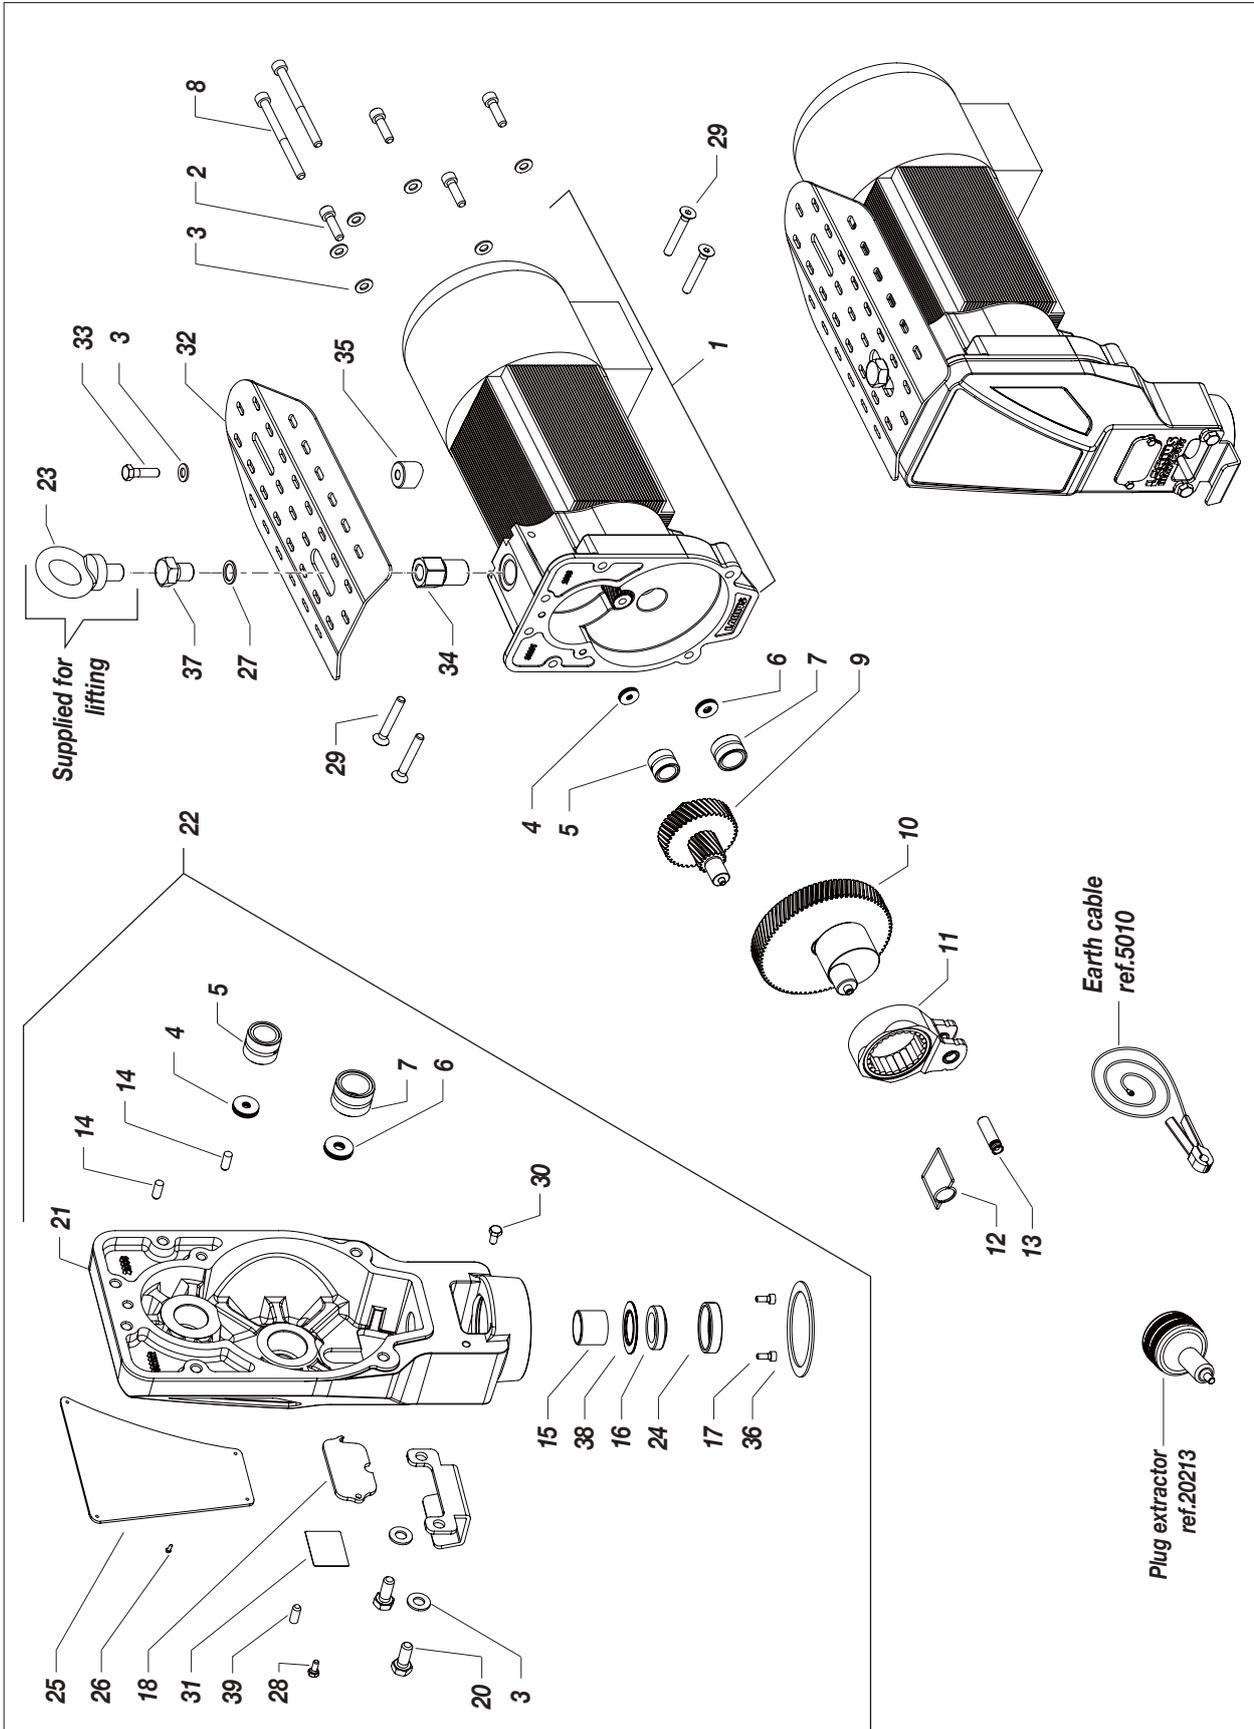


Fig. 10



Pos.	Code	Description	Q. ty
	30200	Complete electromechanical unit model 220V 50Hz	1
	30199	Complete electromechanical unit model 110V 60Hz	1
1	30242	Electric motor 110V 50Hz	1
	30241	Electric motor 220V 60Hz	1
2	30669	Screws	4
3	34009	Washer	9
4	20250	Bearing	2
5	20253	Roller bearing	2
6	30254	Thrust bearing	2
7	30257	Roller bearing	2
8	30271	Screw	2
9	20258	Toothed driving assembly	1
10	30259	Cam assembly	1
11	30262	Complete connecting rod	1
12	30263	Positioning spring	1
13	30210	Pump unit pivot	1
14	20264	Centring pin	2
15	30665	Guide bushing	1
16	30266	Scraper	1
17	5378	Screw	2

Pos.	Code	Description	Q. ty
18	30211	Inspection hatch	1
19	30212	Tin plate door	1
20	69011	Screw	2
21	30202	Reduction unit cover	1
22	30267	Cover assembly	1
23	30270	Eyebolt	1
24	30214	Fixing ring	1
25	30215	Front sticker	1
26	34020	Rivet	6
27	82005/3	Rubber washer	1
28	20245	Screws	2
29	30245	Screws	4
30	96211	Screws	1
31	30271	Warning label	1
32	30216	Protection plate	1
33	8385	Screws	1
34	18478	Threaded spacer	1
35	18479	Plate spacer	1
36	30666	Tightening ring	1
37	30345	Screw	1
38	30225	Fixing ring	1
39	20278	Pin	1

Pos.	Code	Description	Q. ty
4	30250	Bearing	2
5		Roller bearing	2
6		Thrust bearing	2
7		Roller bearing	2
15		Guide bushing	1
16		Scraper	1
17		Screw	2
21		Reduction unit cover	1
25		Front sticker	1
26		Rivet	6
38		Fixing ring	1

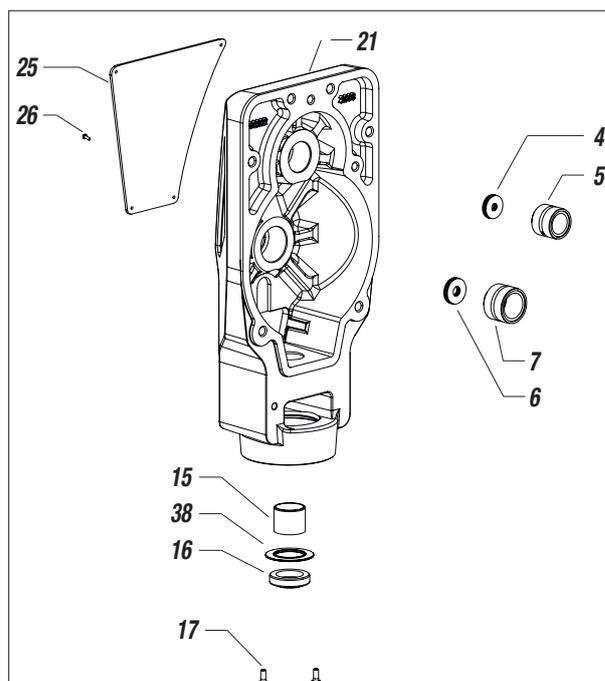


Fig. 20



P COMPLETE RIGID PUMPING ELEMENT

WARNING: Always indicate code and quantity for each part required.

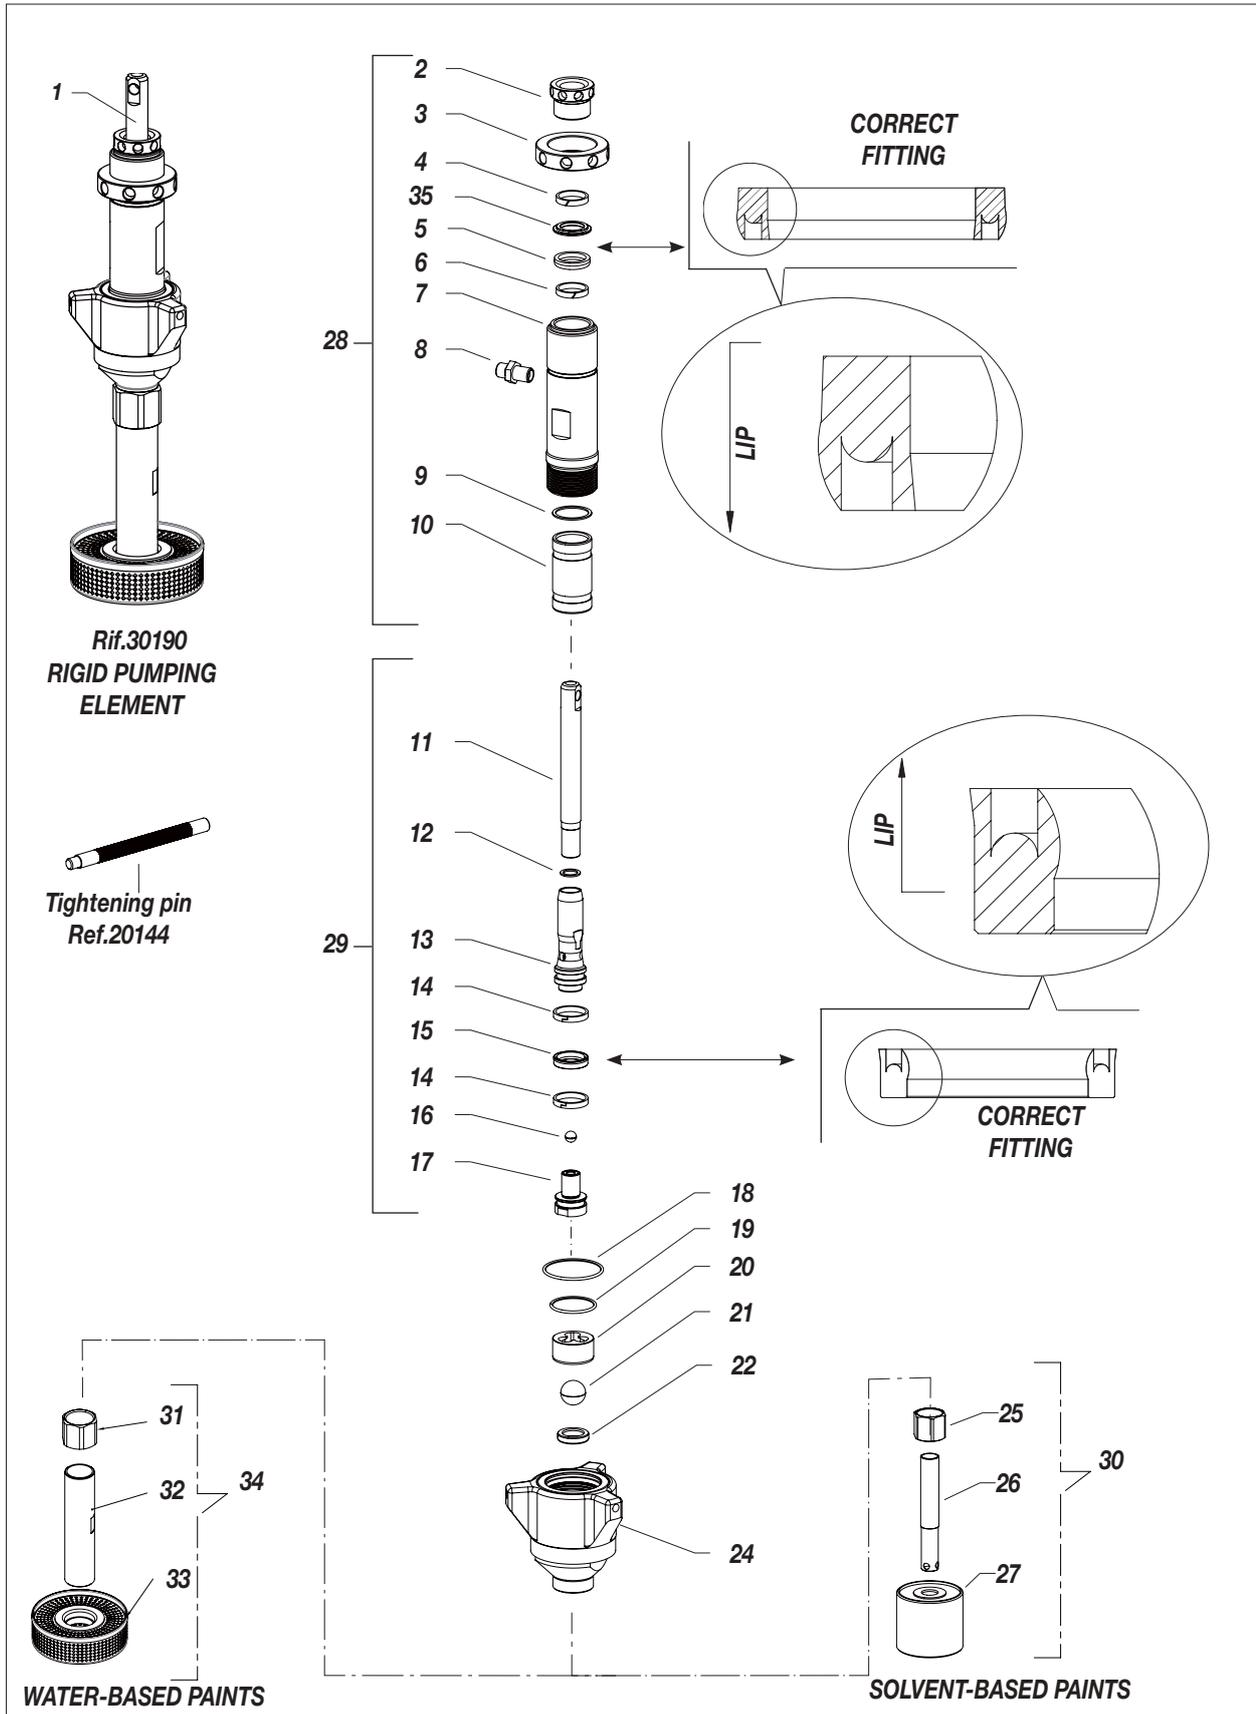


Fig. 1P



Pos.	Code	Description	Q. ty
1	30190	Complete rigid pumping element	1
2	30113	Stuffing nut	1
3	30114	Tightening ring nut	1
4	30138	Upper guide band	1
5	30139	Upper gasket	1
6	30142	Upper guide band	1
7	30112	Upper pump unit casing	1
8	95230	Adapter	1
9	30109	Sleeve-cylinder seal	1
10	30120	Sleeve	1
11	30107	Upper stem	1
12	18482	O-Ring	1
13	30121	Short stem	1
14	30165	Lower seal bands	2
15	30166	Lower gasket	1
16	16120	Ball	1
17	30158	Stem valve assembly	1
18	30132	OR	2
19	30144	OR	1

Pos.	Code	Description	Q. ty
20	30273	Ball guide	1
	30273	Ball guide - vers. with 7/8" ball	1
21	20148	Closing ball	1
	20148	Closing ball - vers. with 7/8" ball	1
22	30131	Ball seat holder	1
	65150	Ball seat holder - vers. with 7/8" ball	1
24	30155	Assembled valve	1
	30130	Assembled valve - vers. with 7/8" ball	1
25	30672	Suction connector for solvent-based paint	1
26	30673	Rigid suction tube for solvent-based paint	1
27	37216	Suction filter for solvent-based paint	1
28	30147	Jacket unit	-
29	30137	Rod unit	-
30	30249	Suction kit for solvent-based paint	-
31	30243	Suction connector for water-based paint	-
32	30244	Rigid suction tube for water-based paint	1
33	20101	Suction filter for water-based paint	1
34	30248	Suction kit for water-based paint	1
35	30122	Ring	-

**KIT COMPLETE PUMP REPAIR
 COD. 40108**

Pos.	Description
4	Upper guide band
5	Upper gasket
6	Upper guide band
9	Sleeve-cylinder seal
10	Sleeve
11	Upper stem
12	O-Ring
14	Lower seal bands
15	Lower gasket
16	Ball
17	Stem valve assembly
18	OR
19	OR
21	Closing ball
22	Ball seat holder

**KIT COMPLETE GASKET
 COD. 30173**

Pos.	Description
4	Upper guide band
5	Upper gasket
6	Upper guide band
9	Sleeve-cylinder seal
14	Lower seal bands
15	Lower gasket
16	Ball
17	Stem valve assembly
18	OR
19	OR
21	Closing ball
22	Ball seat holder

**KIT LOWER AND UPPER
 GASKETS COD. 35081**

Pos.	Description
4	Upper guide band
5	Upper gasket
6	Upper guide band
14	Lower seal bands
15	Lower gasket



Q COMPLETE SHORT PUMPING ELEMENT

WARNING: Always indicate code and quantity for each part required.

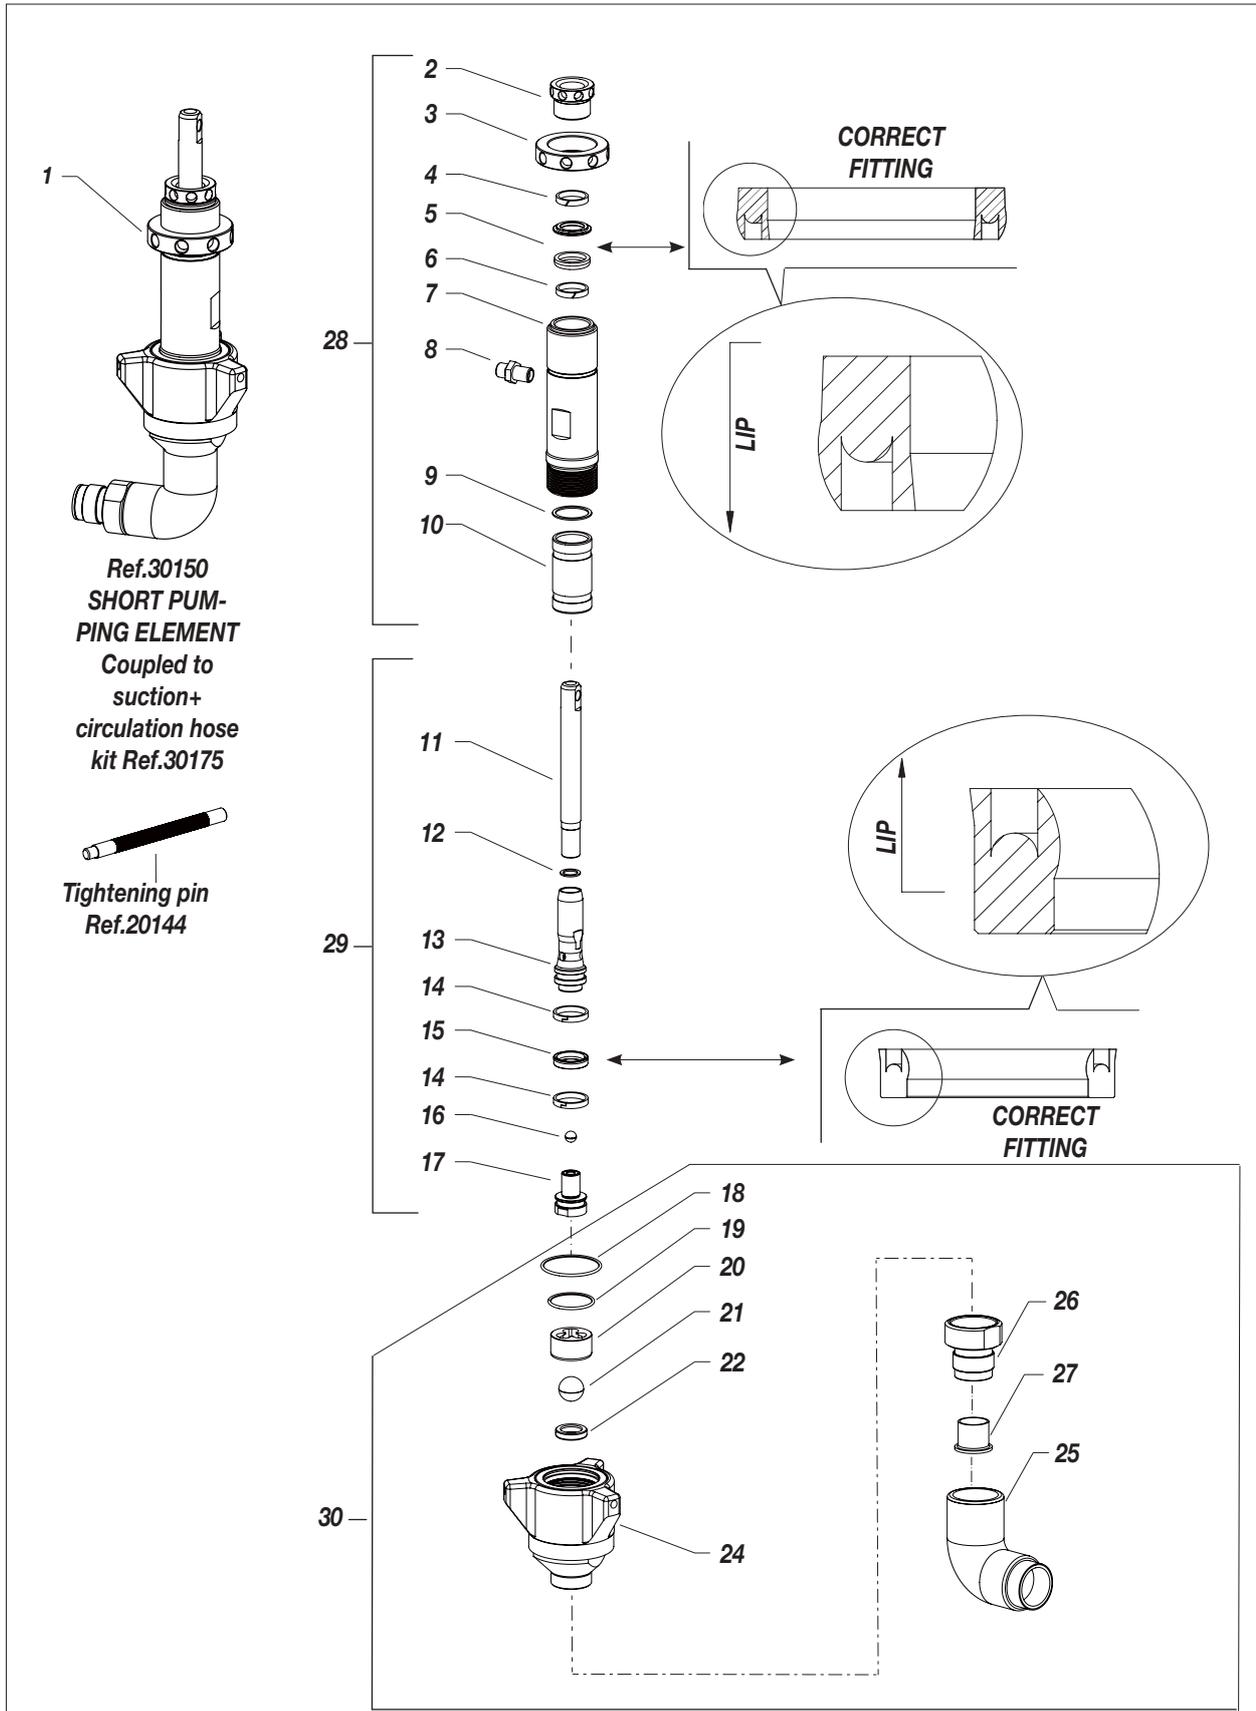


Fig. 1Q



Pos.	Codice	Descrizione	Q. tà
1	30150	Complete short pumping element	1
2	30113	Stuffing nut	1
3	30114	Tightening ring nut	1
4	30138	Upper guide band	1
5	30139	Upper gasket	1
6	30142	Upper guide band	1
7	30112	Upper pump unit casing	1
8	95230	Adapter	1
9	30109	Sleeve-cylinder seal	1
10	30120	Sleeve	1
11	30107	Upper stem	1
12	18482	O-Ring	1
13	30121	Short stem	1
14	30165	Lower seal bands	2
15	30166	Lower gasket	1
16	16120	Ball	1
17	30158	Stem valve assembly	1
18	30132	OR	2
19	30144	OR	1
20	30273	Ball guide	1
	30273	Ball guide - Vers. with 7/8" ball	1
21	20148	Closing ball	1
	20148	Closing ball - Vers. with 7/8" ball	1
22	30131	Ball seat holder	1
	65150	Ball seat holder - Vers. with 7/8" ball	1
24	30155	Assembled valve	1
	30130	Assembled valve - Vers. with 7/8" ball	1
25	20172	90° bend	1
26	19295	Suction pipefitting	1
27	96099	Seal sleeve	1
28	30147	Jacket assembly	-
29	30137	Stem assembly	-
30	30176	Foot valve unit	-
-	30170	Foot valve seal kit	-
-	30173	Complete seal kit	-
-	30174	Jacket+piston kit	-
-	30175	Suction+circulation hose kit	-



R COMPLETE LONG PUMP UNIT

WARNING: Always indicate code and quantity for each part required.

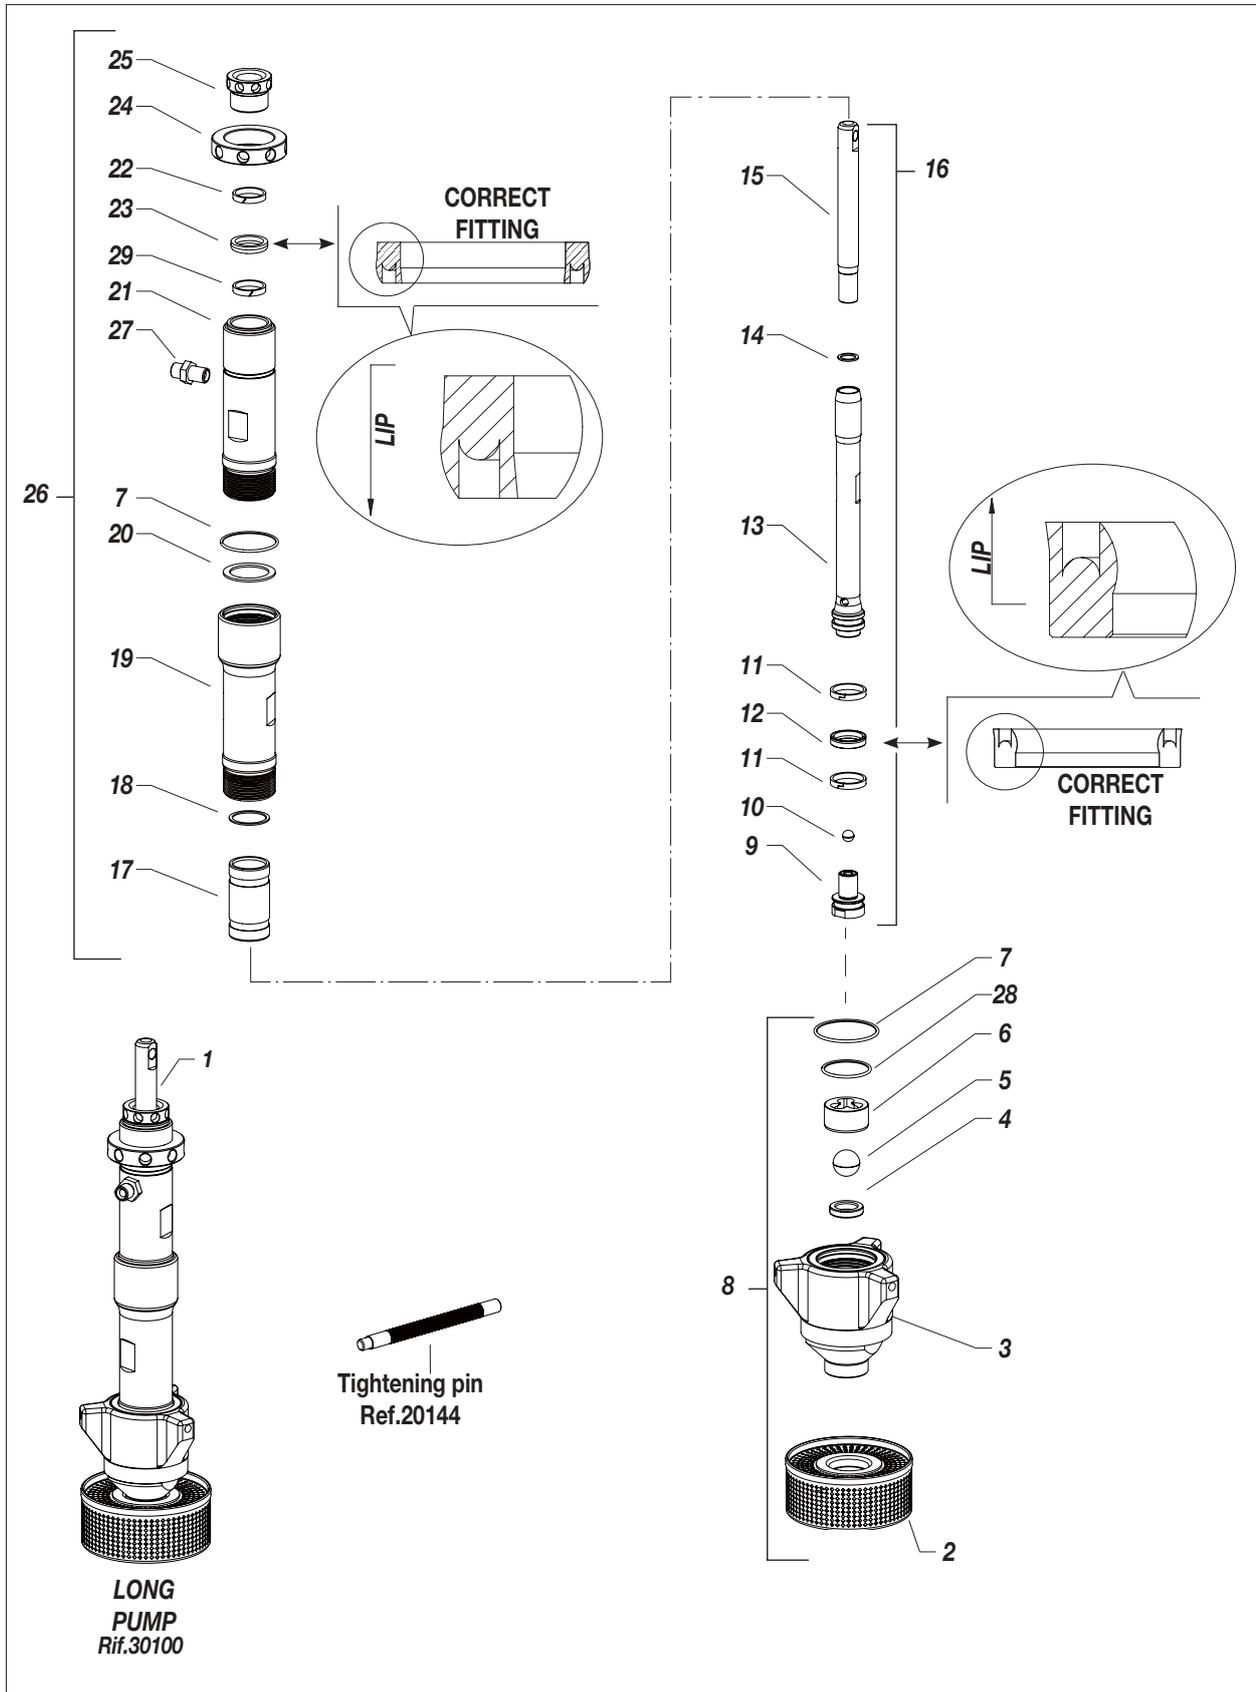


Fig. 1R



Pos.	Code	Description	Q. ty
1	30100	Complete long pump unit	1
2	20101	Suction filter	1
3	30155	Assembled valve	1
	30130	Assembled valve - Vers. with 7/8" ball	1
4	30131	Ball seat holder	1
	65150	Ball seat holder - Vers. with 7/8" ball	1
5	20148	Closing ball	1
	20148	Closing ball - Vers. with 7/8" ball	1
6	30273	Ball guide	1
	30273	Ball guide - Vers. with 7/8" ball	1
7	30132	O-ring	2
8	30133	Foot valve assembly for heavy products	1
9	30158	Stem valve assembly	1
10	16120	Ball	1
11	30165	Lower seal bands	2
12	30166	Lower gasket	1
13	30119	Lower stem	1
14	18482	O-Ring	1
15	30107	Upper stem	1
16	30146	Long pump assembly	1
17	30120	Sleeve	1
18	30109	Sleeve-cylinder seal	1
19	30110	Lower pump unit casing	1
20	30111	Seal	1
21	30112	Upper pump unit casing	1
22	30138	Upper guide band	1
23	30139	Upper gasket	1
24	30114	Tightening ring nut	1
25	30113	Stuffing nut	1
26	30140	Long jacket assembly	1
27	95230	Adapter	1
28	30144	OR	1
29	30142	Upper guide band	1
-	30170	Foot valve seal kit	-
-	30173	Complete seal kit	-
-	30174	Sleeve+piston kit	-

COMPLETE SUBSTITUTION RECOMMENDED COD. 65150

Pos.	Description
8	Foot valve assembly for heavy products
9	Stem valve assembly



S BASIC HYDRAULIC BLOCK REF. 30400 (DWG. XL33SW)

WARNING: Always indicate code and quantity for each part required.

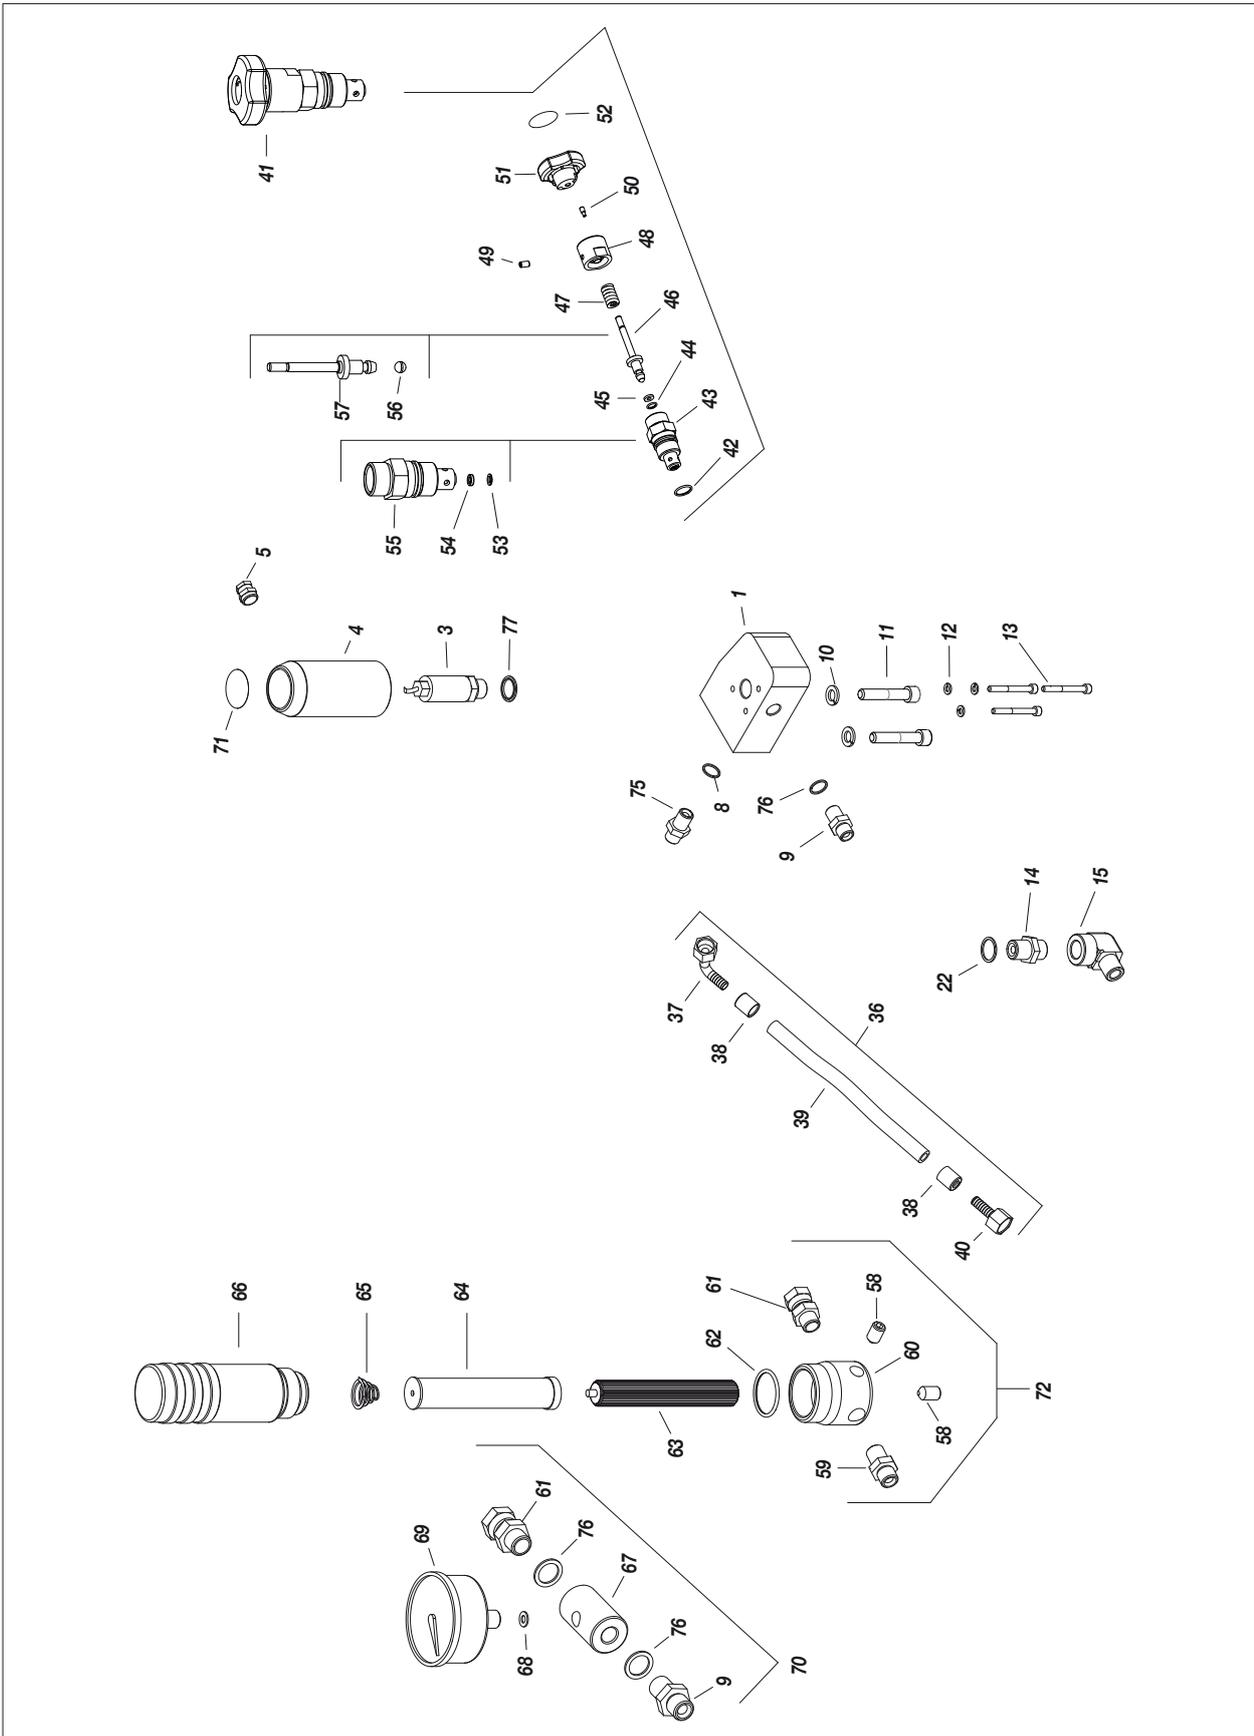


Fig. 1S



Pos.	Code	Description	Q. ty
1	30401	Block base	1
3	20457	Digital pressure switch	1
4	20402	Protection	1
5	20450	Cable fastener	1
8	33010	Sealing washer	1
9	33006	Nipple	1
10	33005	Washer	2
11	95068	Screw	2
12	32005	Washer	3
13	20436	Screw	3
14	96255	Union M-M	1
15	20451	Elbow M-F	1
36	20455	Delivery pipe assembly	
37	37261	Rubber hose	1
38	18511	Bush for pipe 3/8	2
39	18509	Pipe 3/8	1 m
40	18211	Tube coupling Gj 3/8	1
41	37440	Complete recirculation valve	1
42	8402	OR 2087	1
43	37447	Complete valve body	1
44	301013	OR 2025	1
45	37284	Ring BK2021	1
46	37446	Complete rod	1
47	37281	Spring	1
48	37449	Bush	1
49	8026/1	Hex socket set screw	1

Pos.	Code	Description	Q. ty
50	37444	Positioning pin	1
51	16405	Knob	1
52	30450	Warning stickers	1
53	37283	Sealing washer	1
54	7154	Ball seat	1
55	37441	Valve bdy	1
56	4050	Ball Ø 6	1
57	37445	Rod stem	1
58	96205	Hex socket set screw	2
59	96206	Nipple M-M 1/4" - M16 x 1.5	1
60	96204	Filter base	1
61	37453	Nose union	2
62	96203	Or	1
63	96207	Sieve holder	1
64	95218	Filter sieve	1
65	96202	Sieve spring	1
66	96201	Filter tank	1
67	37452	Coupling	1
68	37454	Gasket	1
69	53011	Manometer	1
70	147	Complete pressure gauge	1
71	30439	Warning sticker	1
72	30469	Filter assembly	1
75	34109	Coupling M-M Gc-Gj 3/8	1
76	33007	Washer 22 x 16,2 sp. 1.5	3
77	20421	O-Ring	1



T CIRCULATION SYSTEM UNIT (DWG. XL33SW)

WARNING: Always indicate code and quantity for each part required.

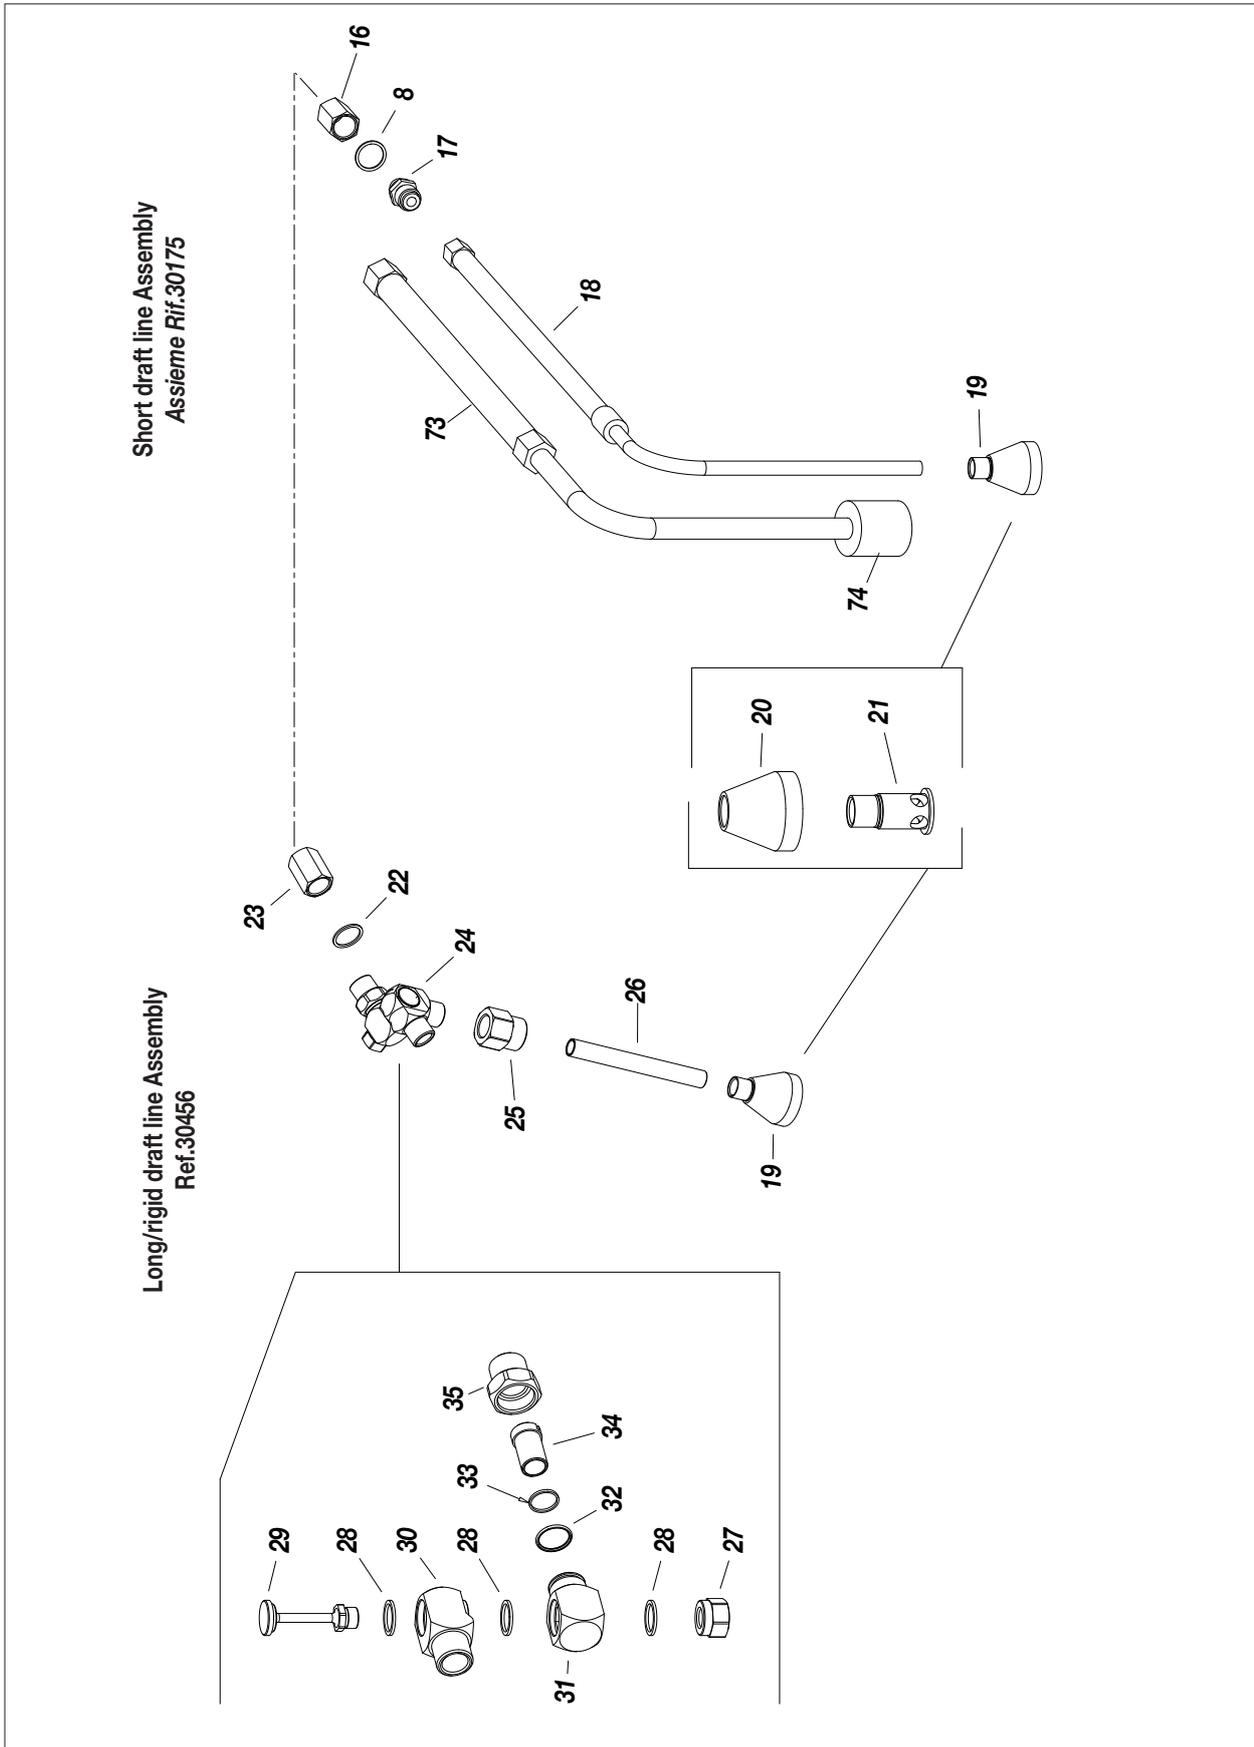


Fig. 1T



Pos.	Code	Description	Q. ty
8	33010	Sealing washer	1
16	30430	Cylindrical reduction piece	1
17	3387	Nipple	1
18	20557	Recirculation tube	1
19	18350	Splash bell	1
20	18351	Bell	1
21	18352	Dispersion pin	1
22	8071	Sealing washer	2
23	30411	Coupling F-F	1
24	20403	Jointed fitting	1
25	20422	Tube coupling	1
26	20420	Tube	1

Pos.	Code	Description	Q. ty
27	20408	Locking nut	1
28	20405	Gasket	3
29	20404	Pin	1
30	20406	Elbow	1
31	20407	Fitting	1
32	7230	OR 2058	1
33	20409	O-ring	1
34	20410	Sleeve	1
35	20411	Coupling	1
73	20556	Suction tube	1
74	37216	Drum filter	1

U CARRIAGE

WARNING: Always indicate code and quantity for each part required.

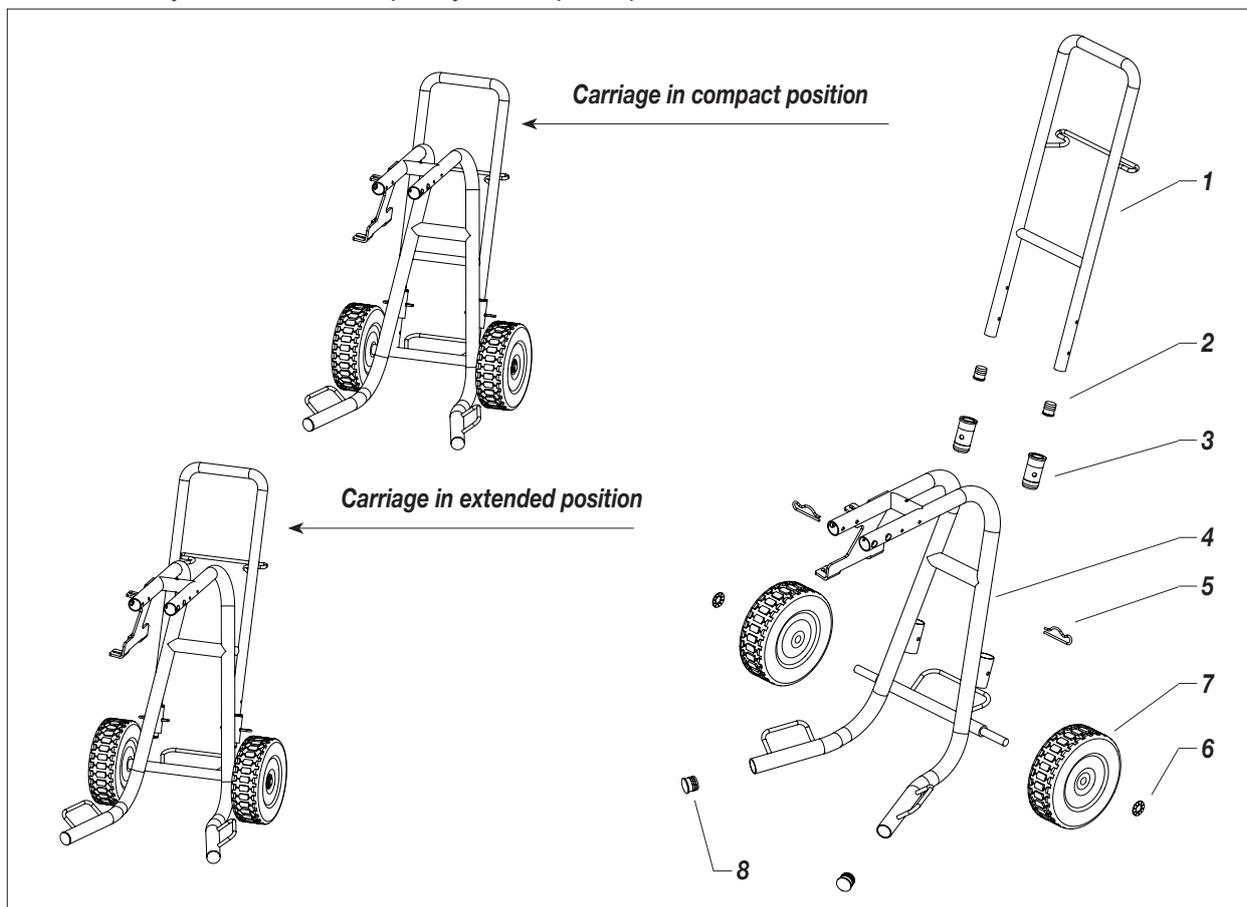


Fig. 1U

Pos.	Code	Description	Q. ty
-	30300	Complete carriage	-
1	30301	Carrying handle	1
2	95159	Pipe cap	2
3	18914	Bushing	2
4	30302	Carriage	1

Pos.	Code	Description	Q. ty
5	18902	Split pin	2
6	20305	Wheel stop washer	2
7	37238	Wheel Ø260 mm	2
8	30304	Pipe cap	2



V ELECTRICAL CONTROL - EXPLODED VIEW

WARNING: Always indicate code and quantity for each part required.

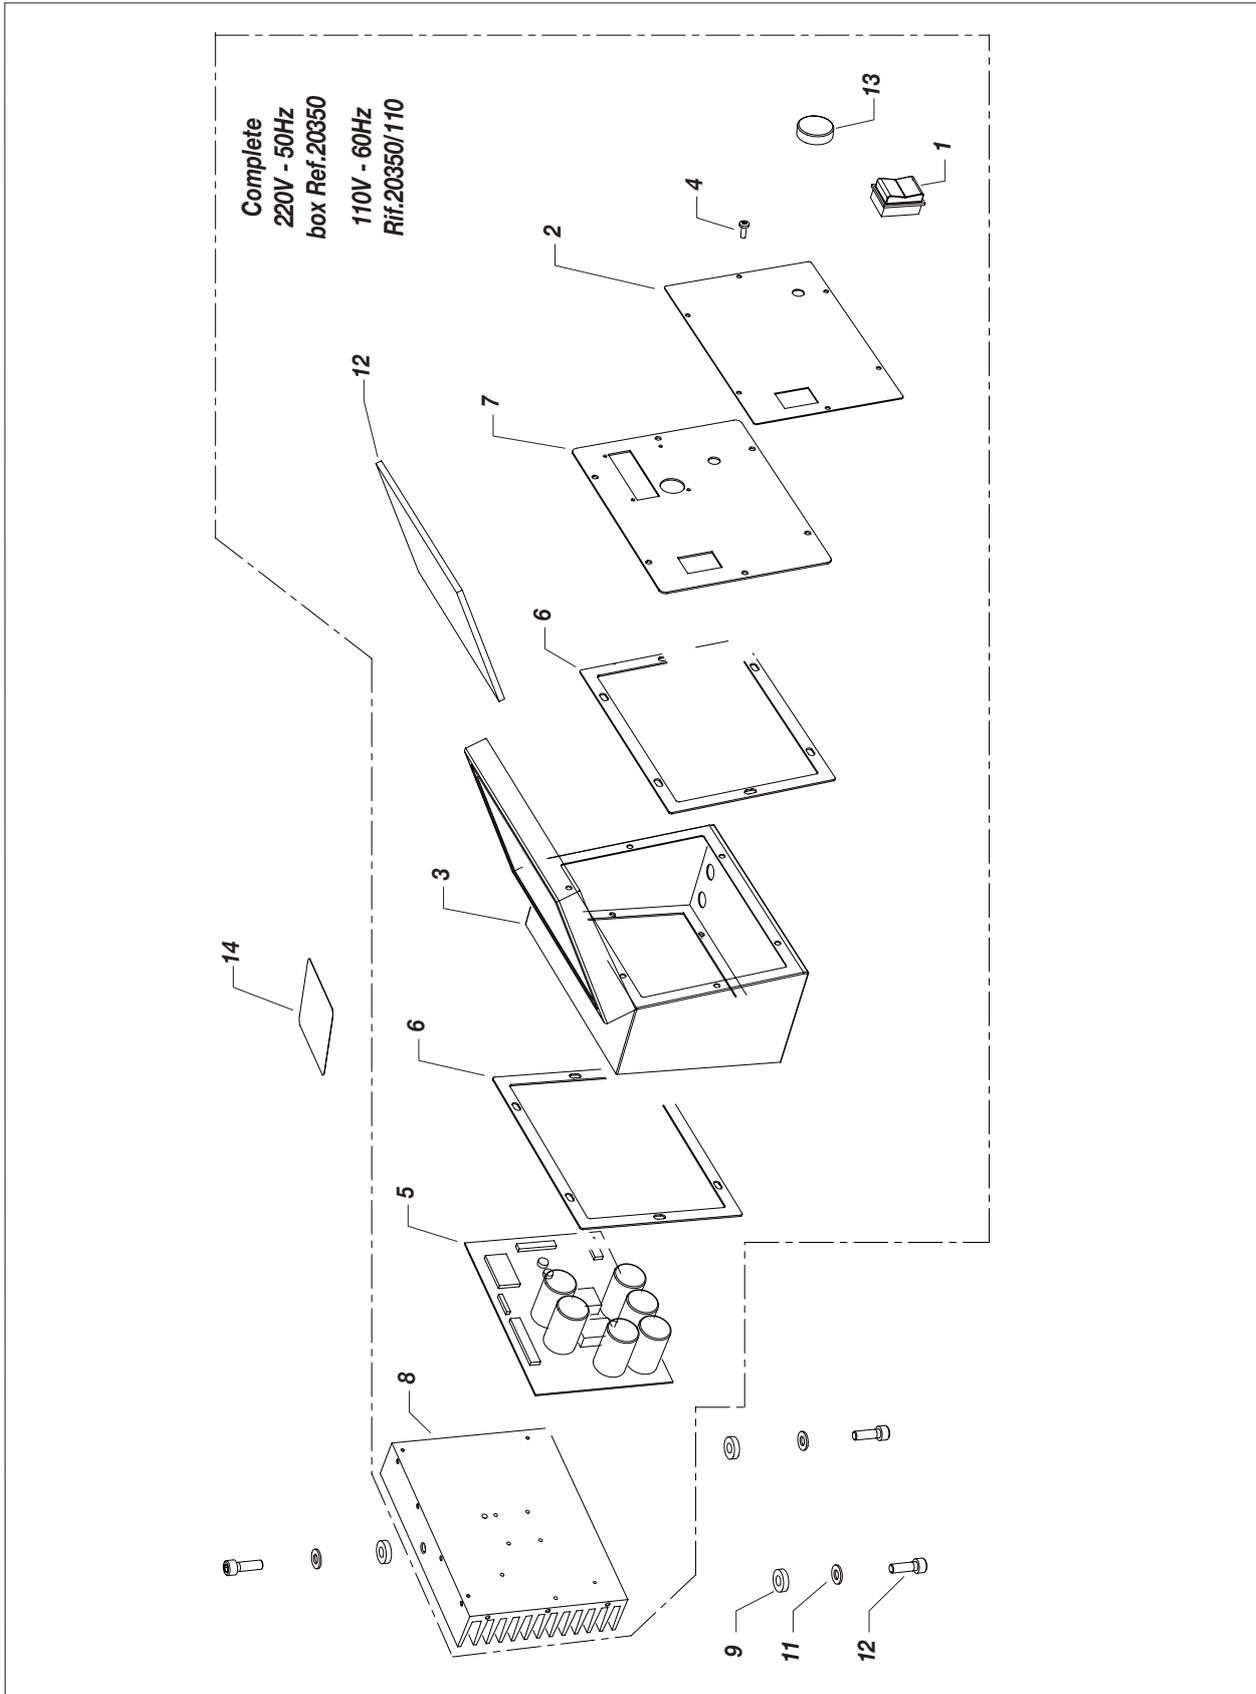


Fig. 1V



Pos.	Code	Description	Q. ty
		Electronic box A C.	
-	30350	Model 220V - 50Hz	-
-	30357	Model 110V - 60Hz	-
1	5933	Switch	1
2	20355	Panel	1
3	20354	Electronic box	1
4	96028	Screw	6
5	20365	Electronic board	1
6	18483	Short rubber seal	2

Pos.	Code	Description	Q. ty
7	18493	Tightening plate	1
8	20352	Dissipator	1
9	8011	Anti-vibration washers	3
10	34009	Washer	3
11	34008	Screw	3
12	20340	Transparent sheet	1
13	20349	Knob	1
14	30280	Technical data label	1

W LINER TYPE MACHINES

NOTES ON THE ASSEMBLY OF THE CLUTCH UNIT

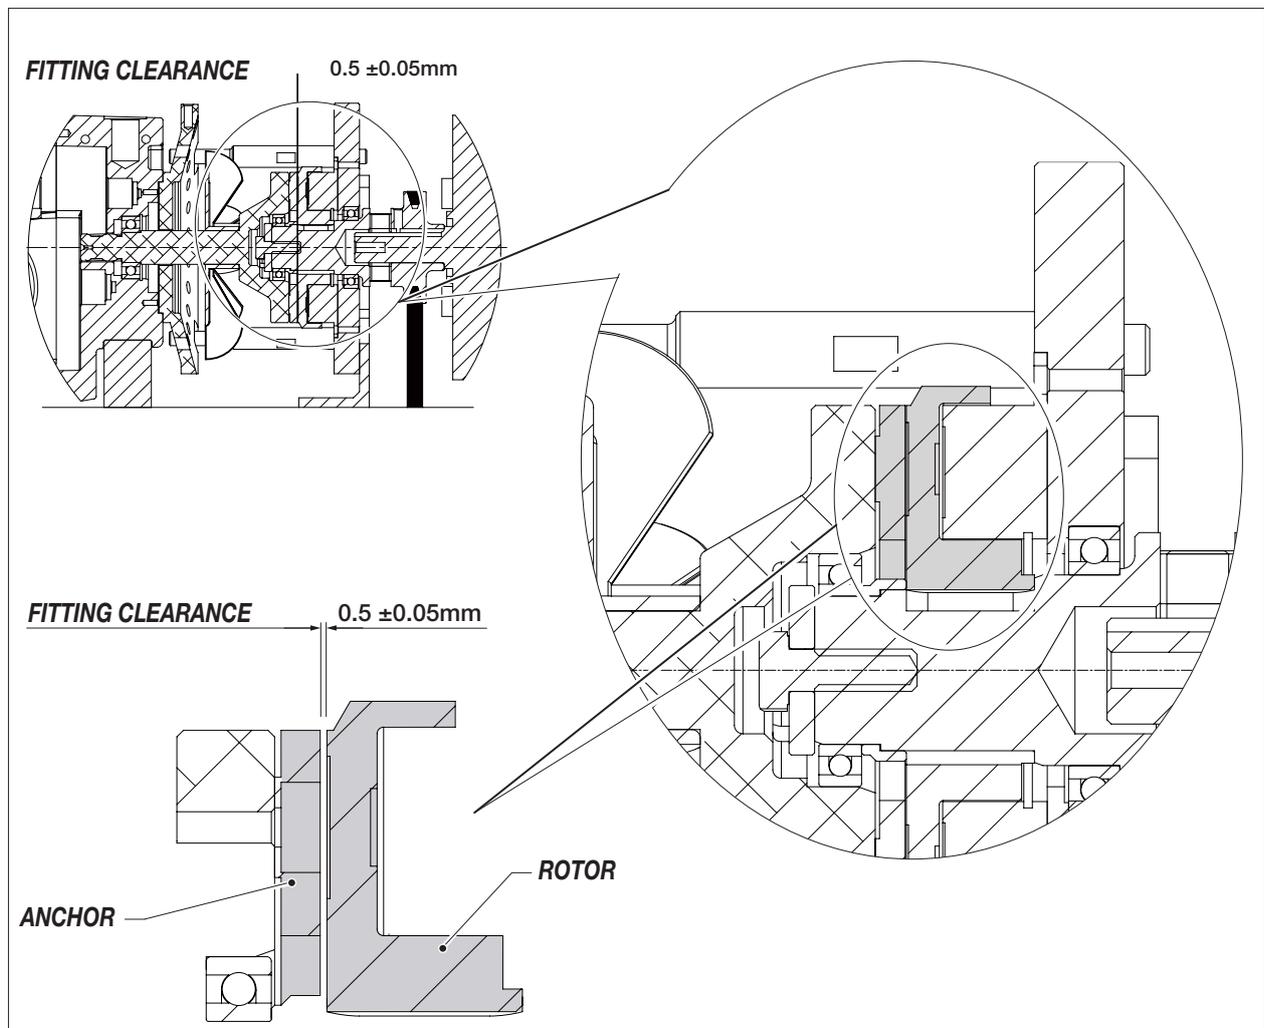


Fig. 1W



ATTENTION

Check for proper clearance ($0,5 \pm 0,05\text{mm}$) between the anchor and the rotor when assembling the clutch unit.



WARNING: Always indicate code and quantity for each part required.

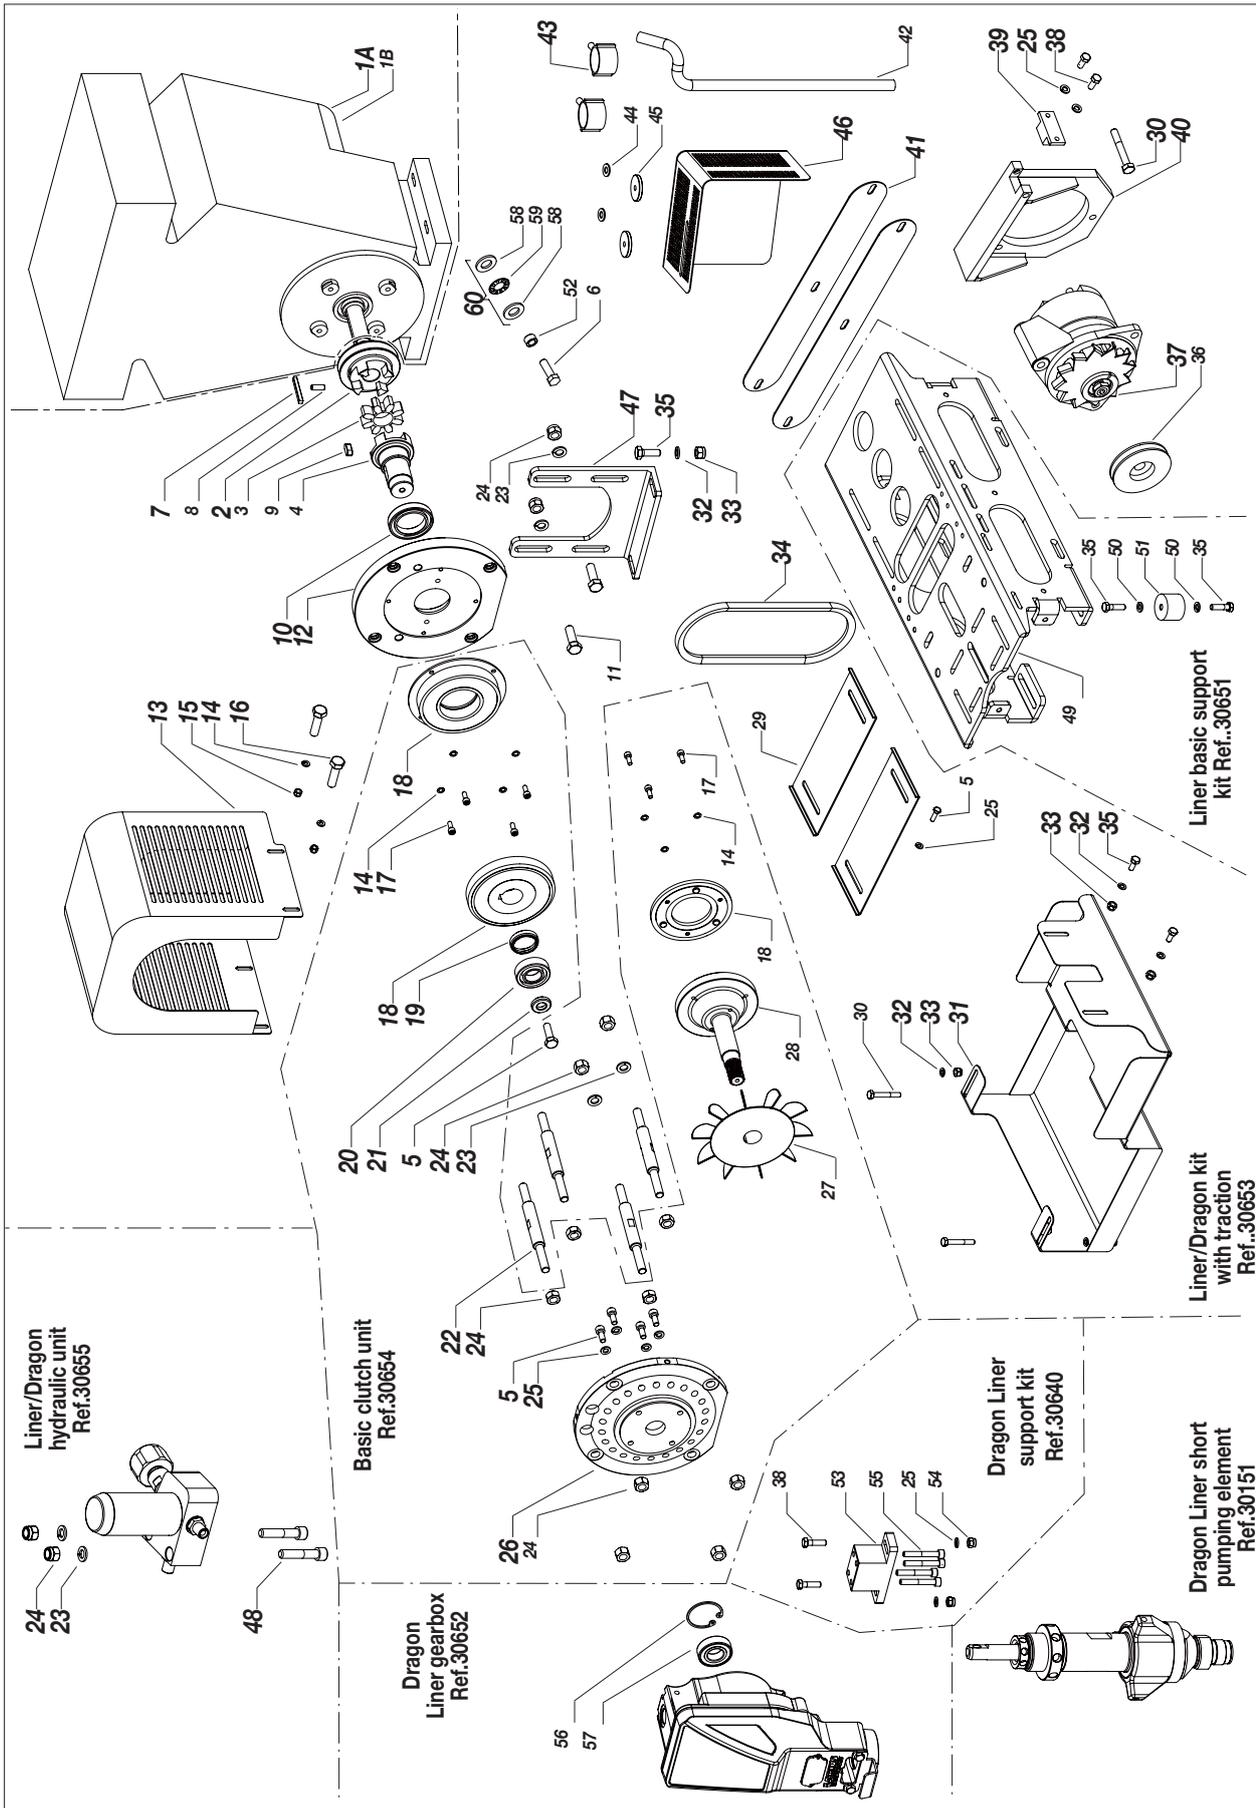


Fig. 2W



Pos.	Code	Description	Q. ty
1A	18186	Motor	1
1B	18187	Motor	1
2	18473	Motor pulley-joint	1
3	81038	Flexible coupling	1
4	18474	Clutch-joint	1
5	34008	Screw	10
6	18192	Screw	1
7	18189	Shaft tab	1
8	81009	Hex socket set screw	1
9	30656	Tab	1
10	30657	Bearing	1
11	7112	Screw	2
12	18477	Flange motor	1
13	18476	Guard	1
14	54003	Washer	13
15	8042	Self-tightening nut	12
16	16064	Screw	4
17	54004	Screw	7
18	18491	Complete clutch	1
19	18490	Spacer ring	1
20	30659	Bearing	1
21	30686	Locking ring	1
22	18475	Tie-rods	4
23	95066	Washer	12
24	5756	Self-tightening nut	12
25	96030	Washer	6
26	20510	Reduction gear flange	1
27	20531	Fan	1
28	18492	Pinion	1
29	18467	Safety shields	2
30	83004	Screw	5

Pos.	Code	Description	Q. ty
31	18469	Guard	1
32	95096	Washer	14
33	96080	Self-tightening nut	6
34	4752	Alternator belt	1
35	4409	Screw	12
36	4777/1	Alternator pulley	1
37	4758	Alternator	1
38	8371	Screw	2
39	4771	Alternator fulcrum	1
40	4776	Alternator plate	1
41	30667	Safety shields	2
42	30690	Drain pipe	1
43	1000506	1" collar	2
44	510068	Washer	2
45	95153	Washer	2
46	30691	Safety cover	1
47	18471	Support plate	1
48	30451	Screw	2
49	18472	Support plate	1
50	95096	Washer	6
51	20537	Vibration-damping pad	4
52	18459	Support bush	1
53	18470	Dragon Liner support	1
54	53002/4	Self-tightening nut	14
55	6151	Screw	4
56	20534	Snap ring for holes	1
57	20535	Radial bearing	1
58	18452	Fifth wheel	2
59	18453	Axial roller cage	1
60	18454	R.S. bearing unit	1



X PETROL-POWERED DRAGON

WARNING: Always indicate code and quantity for each part required.

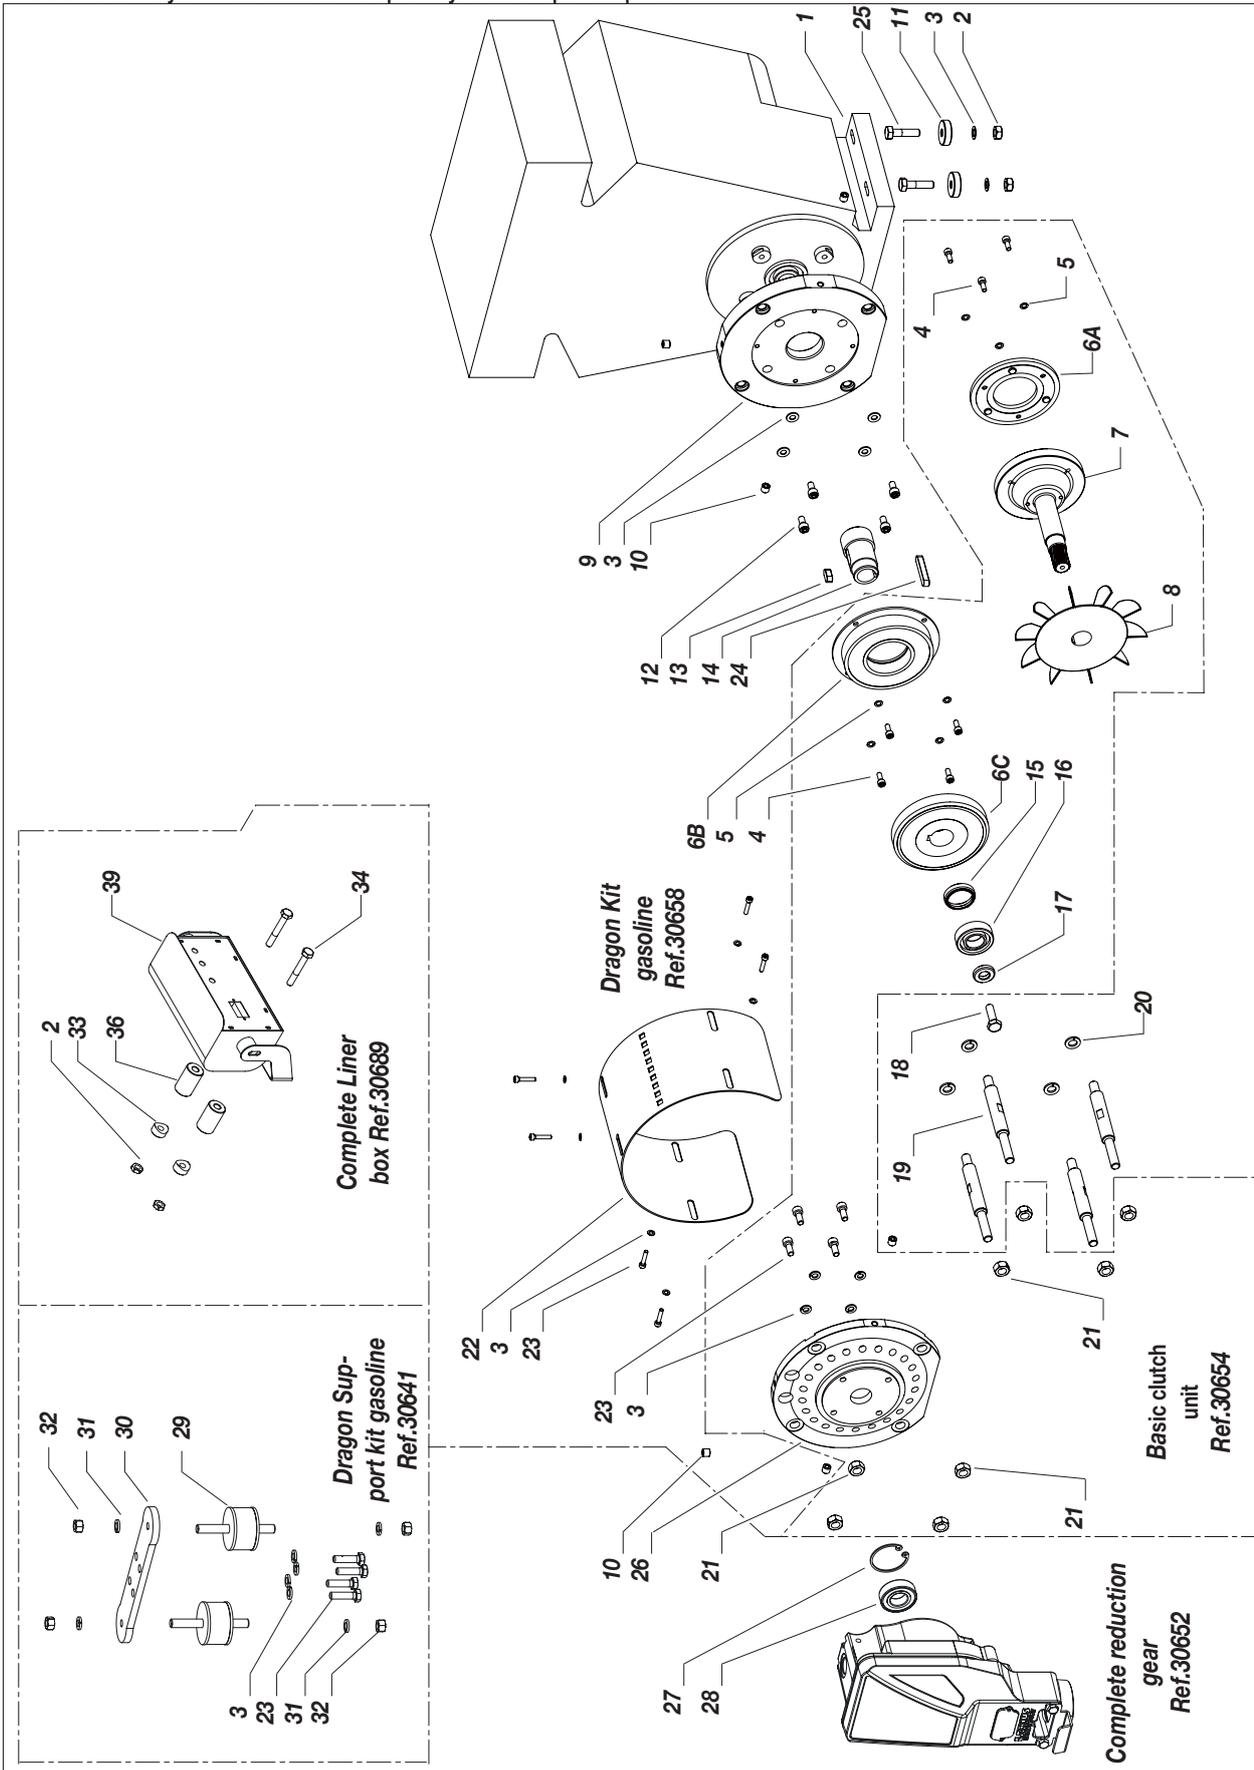


Fig. 1X



Pos.	Code	Description	Q. ty
1	18186	Motor	1
2	3637	Self-tightening nut	16
3	34009	Washer	22
4	54004	Screw	7
5	32005	Washer	7
6	18491	Complete clutch	1
6A	.	Anchor	1
6B	.	Coil	1
6C	.	Rotor	1
7	18492	Pinion	1
8	20531	Fan	1
9	30682	Flange motor	1
10	30683	Cover spacers	6
11	18463	Spacers	4
12	18935	Screw	4
13	30656	Tab	1
14	30684	Bush	1
15	18490	Spacer	1
16	30659	Bearing	1
17	30686	Tightening washer	1

Pos.	Code	Description	Q. ty
18	18192	Screw	1
19	20508	Tie-rods	4
20	95114	Washer	4
21	81010	Nut	8
22	20509	Guard	1
23	34008	Screw	14
24	18189	Motor tongue	1
25	69016	Screw	4
26	20510	Reduction gear flange	1
27	20534	Snap ring for holes	1
28	20535	Radial bearing	1
29	20536	Hydraulic buffer assembly	2
30	30685	Support plate	1
31	33005	Washer	4
32	96080	Self-tightening nut	4
33	20514	Spacer	4
34	69107	Screw	4
35	4470/2	Box	1
36	30688	Spacer	2



WARNING: Always indicate code and quantity for each part required.

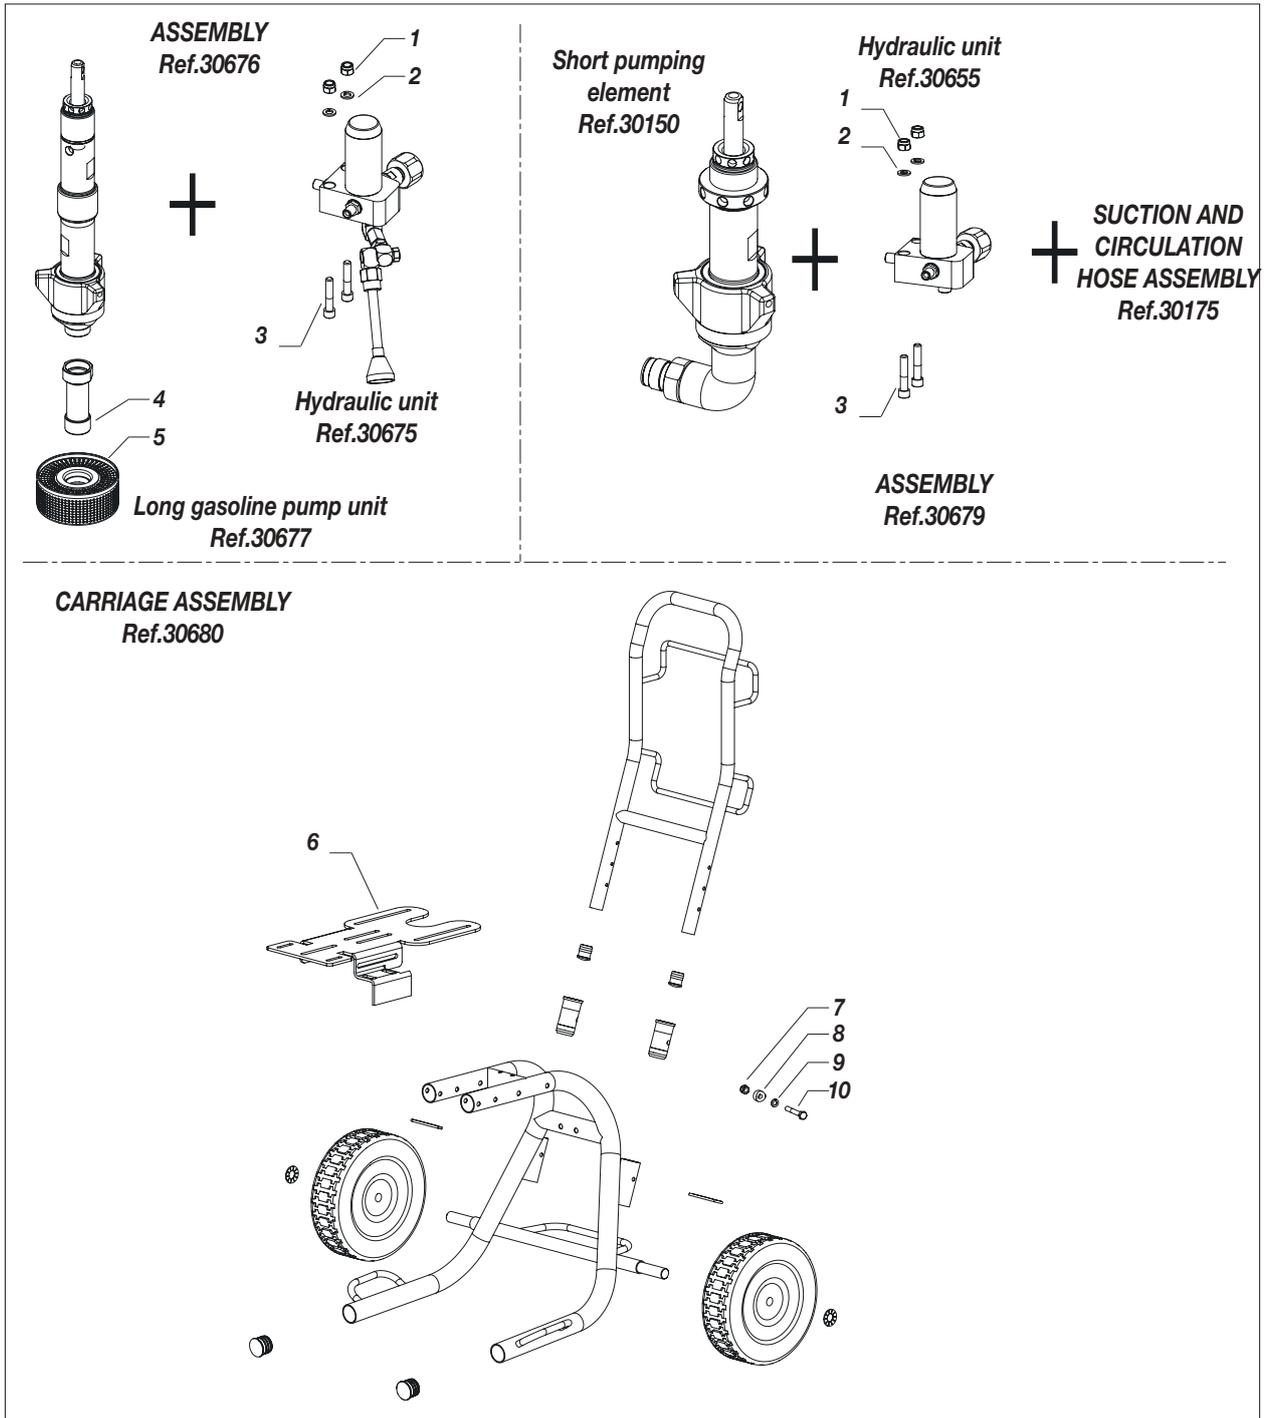


Fig. 2X

Pos.	Code	Description	Q. ty
1	81010	Nut	8
2	95114	Washer	4
3	30451	Screw	2
4	20115	Extension cables	1
5	20101	Filter	1

Pos.	Code	Description	Q. ty
6	20513	Support plate	1
7	3637	Nut	16
8	20514	Spacer	4
9	34009	Washer	22
10	69107	Screw	4

NOTES ON THE ASSEMBLY OF THE CLUTCH UNIT

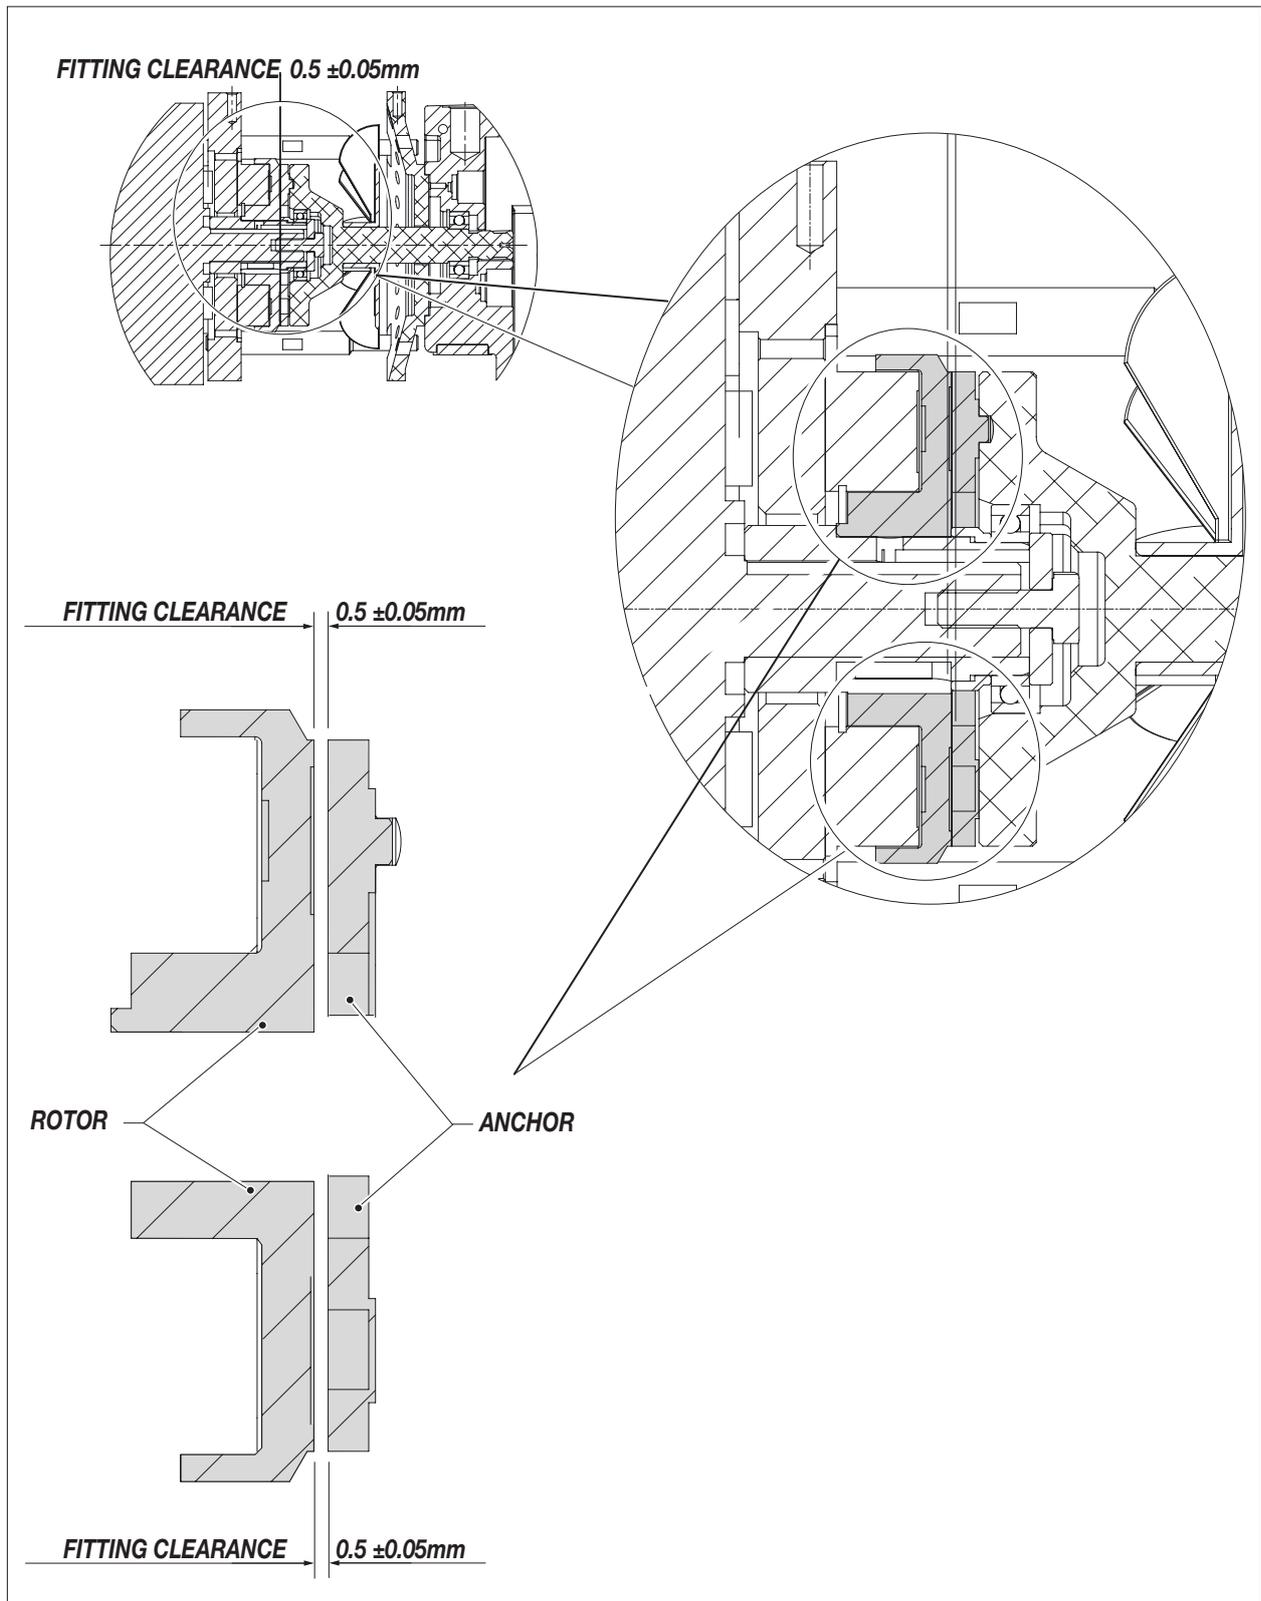


Fig. 3X



ATTENTION
Check for proper clearance ($0,5 \pm 0,05\text{mm}$) between the anchor and the rotor when assembling the clutch unit.



Y HIGH PRESSURE GUN "AT 300"

WARNING: Always indicate code and quantity for each part required.

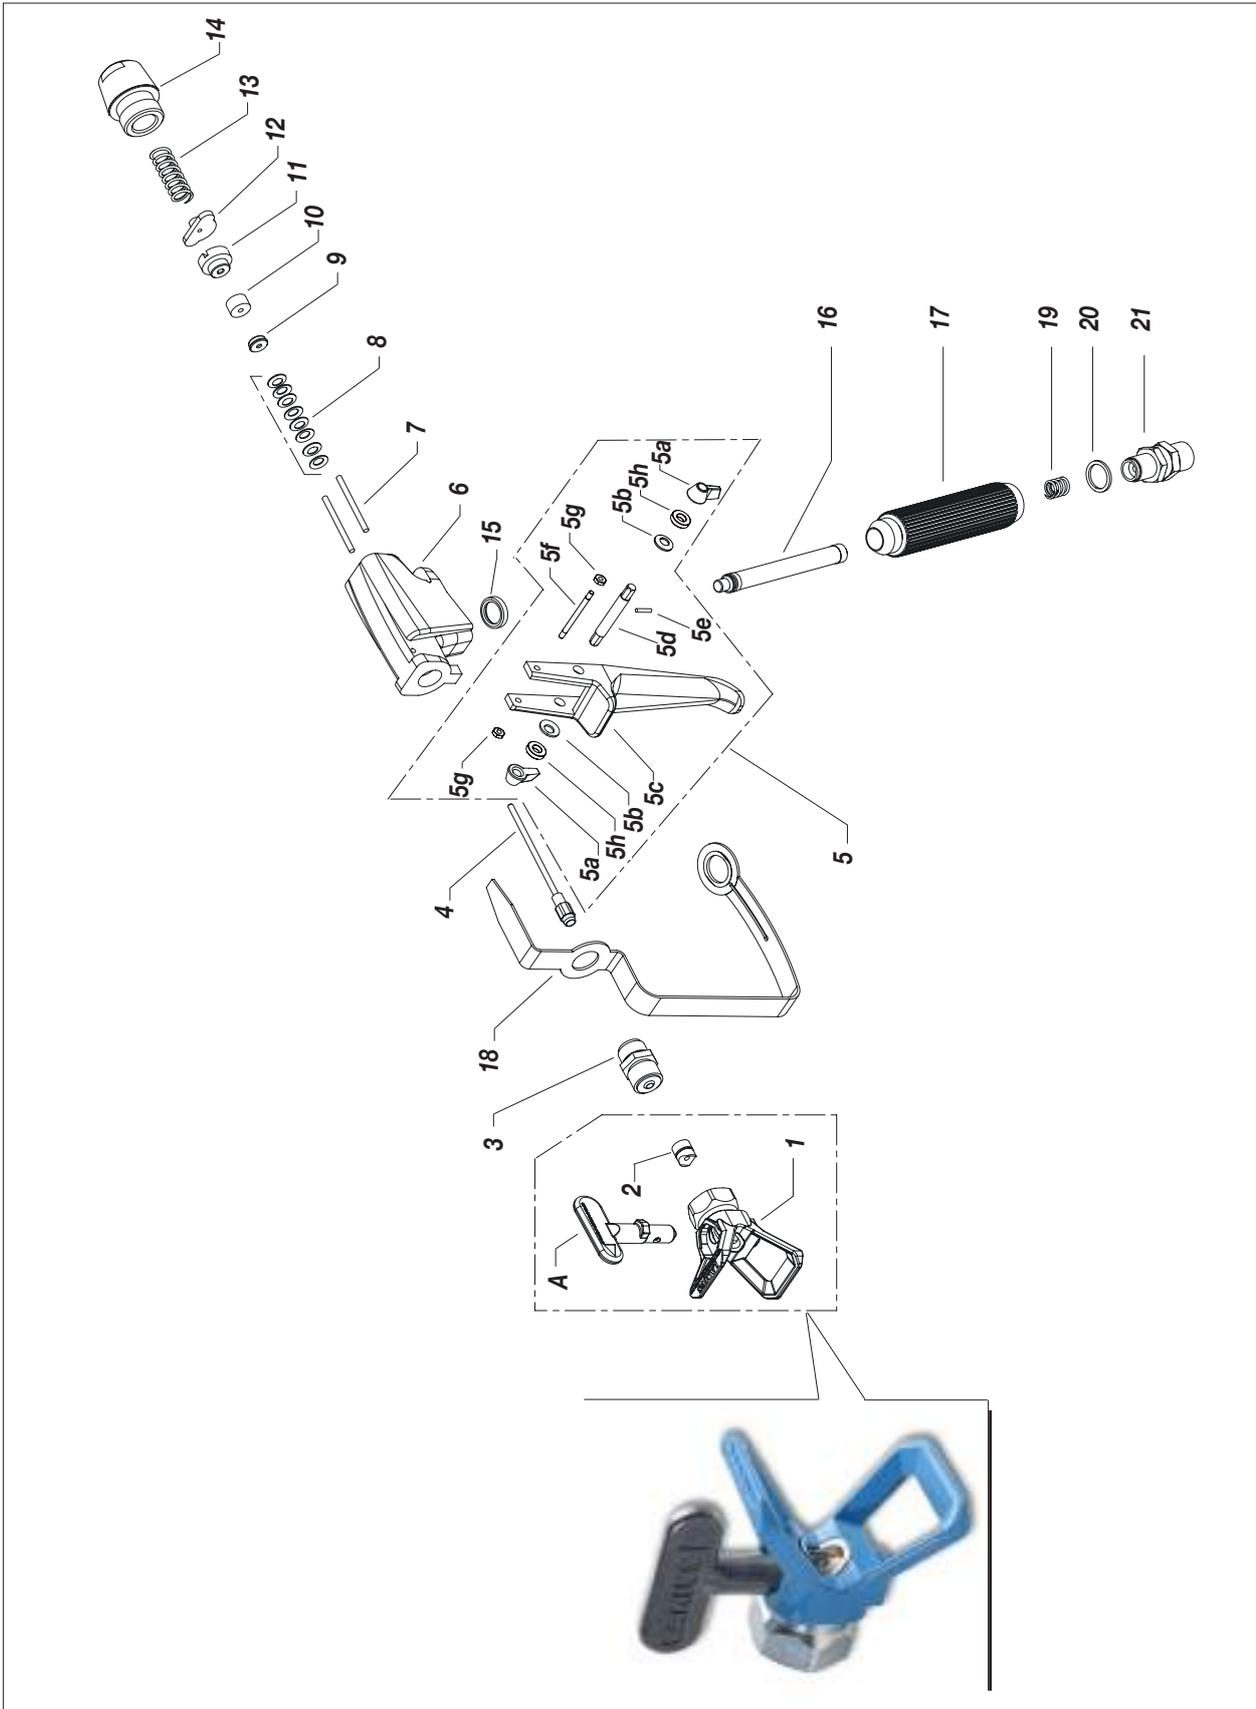


Fig. 1Y



Pos.	Code	Description	Q. ty	Pos.	Code	Description	Q. ty
A	See table*	Nozzle Super Fast Clean	-	8	11022	Spring Bauer 11x6x0.6	1
1	18270	Body Super Fast Clean	1	9	11023	Wedge	1
2	18280	Gasket Super Fast Clean	1	10	11024	Sleeve sealing	1
3	11004	Sleeve	1	11	11025	Screw press sleeve	1
4	11005	Prick punch complete	1	12	11026+11027	Plate + M3 nut	1
5	11008	Trigger gun	1	13	11028	Spring	1
5a	11010	Safety lever	1	14	11029	Adjustment knob	1
5b	11011	Brake Washer	1	15	11020	Gasket	1
5c	11009	Trigger	1	16	-	Filter	1
5d	11012	Pin	1	17	11018	Handgrip	1
5e	11013	Pin	1	18	3085 + 11032	Safety for hand + 3 screws TSP 3x8	1
5f	11034/1	Pin	1	19	11017	Spring	1
5g	11027	Nut M3	1	20	32010	Copper washer	1
5h	11016	Washer	1	21	11015	Articulated joints M16x1,5	1
6	11007	Gun body	1		11155	Articulated joints 1/4"	1
7	11021	Pins	1				



Never point the spray gun towards other people.
During breaks in work activities, always secure the spray gun with its appropriate safety lock.
This device helps to avoid serious accidents which may result due to the spray gun's high power.
Do not place fingers in front of the nozzle.
Disconnect the pressure from the device before cleaning the spray gun, even externally.



Z ELECTRIC MOTOR

WARNING: Always indicate code and quantity for each part required.

- Periodically check on the wear of the pinion (*at least every 1000 working hours*).
- Periodically check the perfect connection among all the electrical components (*at least every 200 working hours*).
- The length of the brush contact must be higher than 9 mm to guarantee a good working of the rotary group.



DISCONNECT THE POWER SUPPLY BEFORE CHECKING OR REPLACING THE BRUSHES.



Code	Description	Q. ty
20280	Brush 220V 50Hz	4
20281	Brush 110V 60Hz	4
20282	Brush holder plug	4

Fig. 1Z

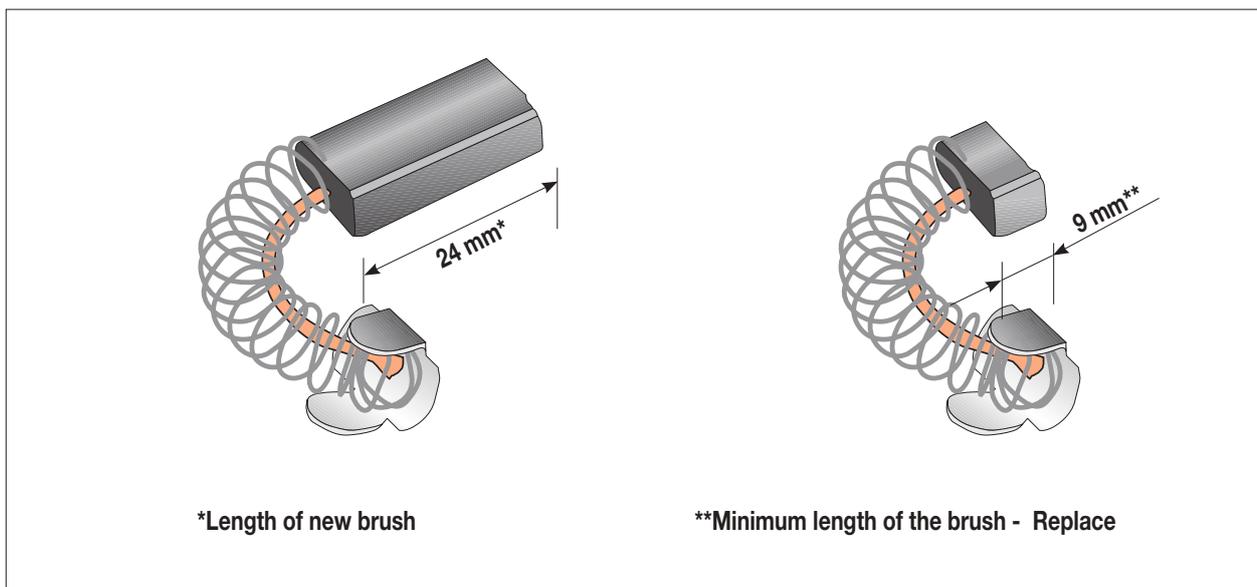


Fig. 2Z



AA ELECTRICAL DIAGRAM

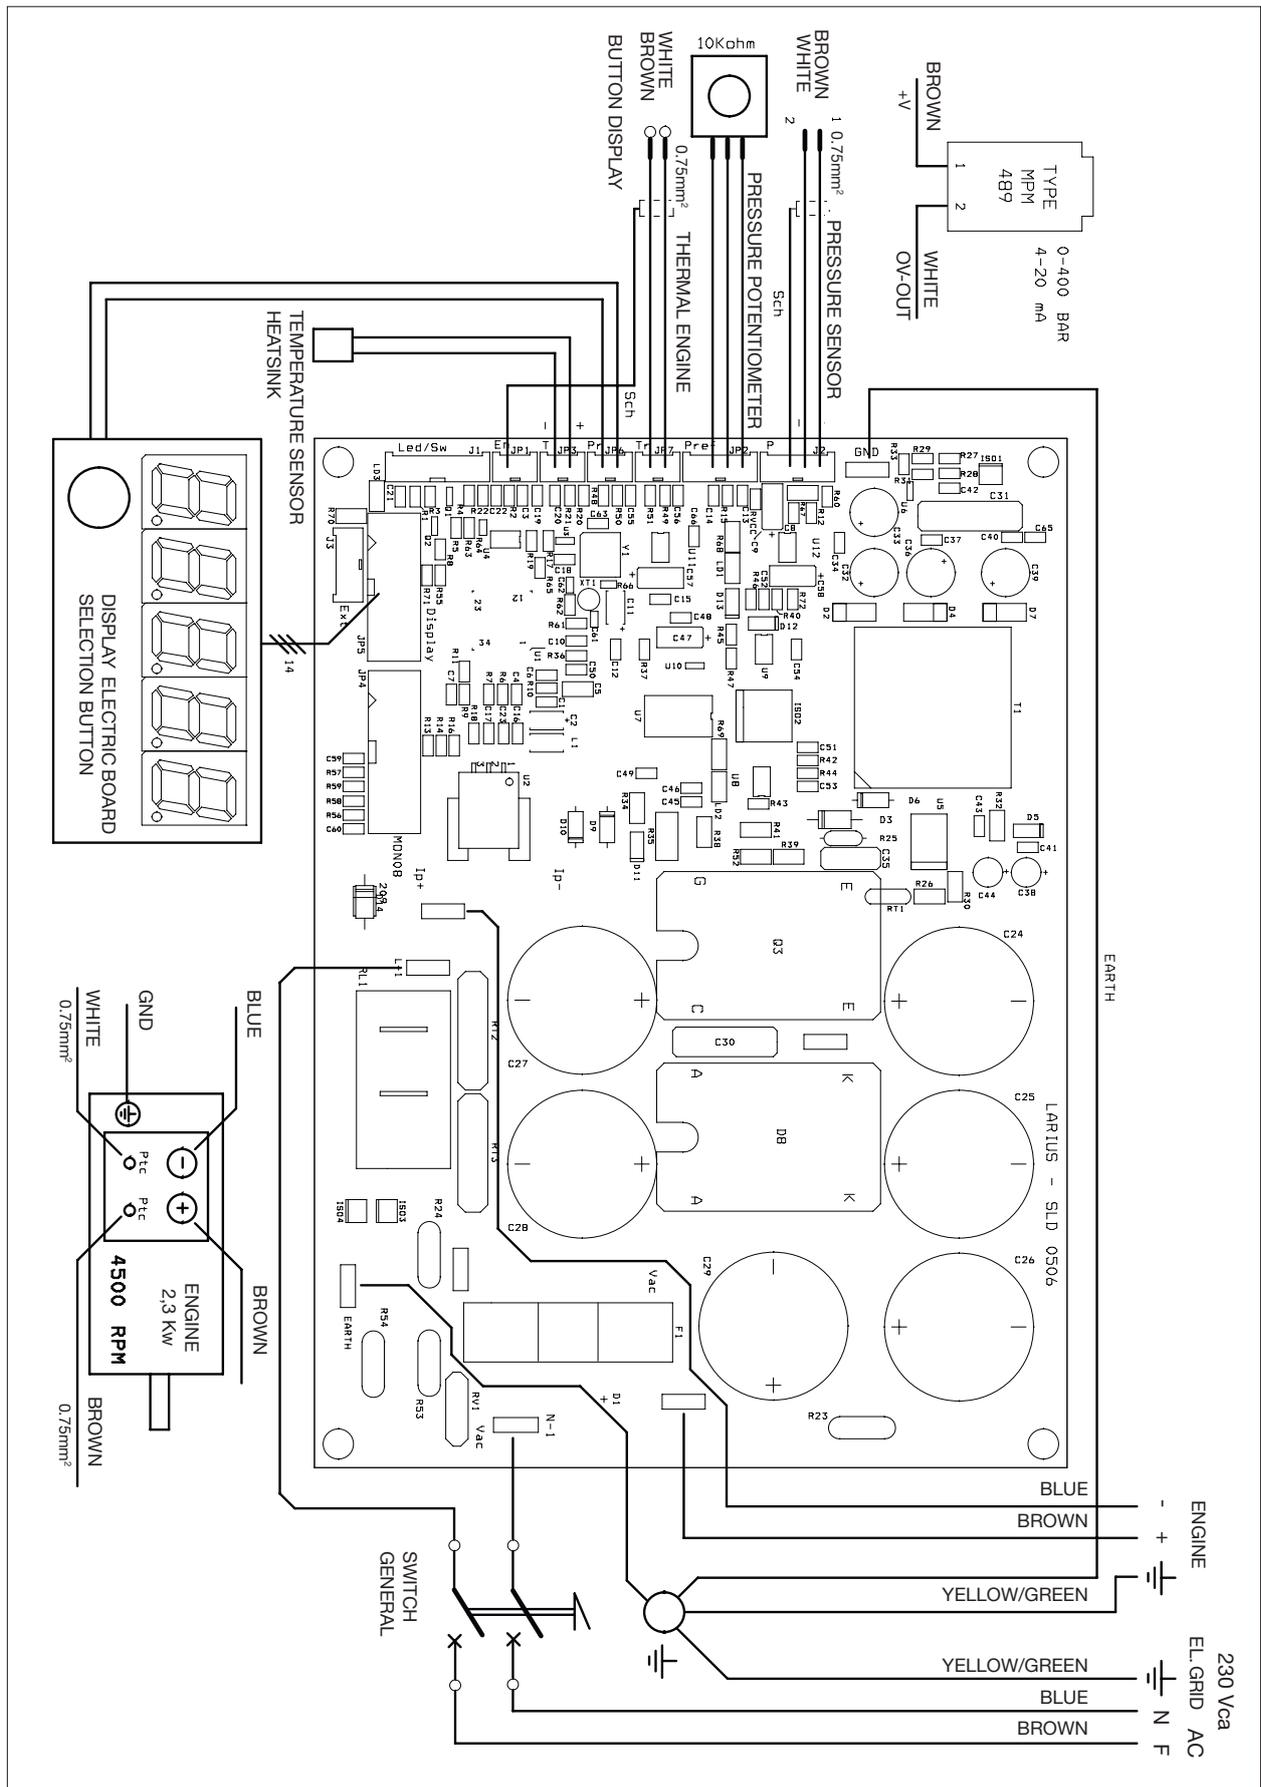


Fig. 1AA



AB ACCESSORIES

WARNING: Always indicate code and quantity for each part required.



Art.	Description
20101	Filter



SWIVEL CONNECTION FOR PLA	
Art.	Description
10156	Swivel connection for PLA 1/4"
10159	Swivel connection for PLAM16x1,5



PISTON GUNSTOCK FILTERS	
Art.	Description
11039	Green (30M)
11038	White (60M)
11037	Yellow (100M)
11019	Red (200M)



HIGH PRESSURE GAUGE	
Art.	Description
147	M16x1,5
150	1/4"



AT 300 GUN	
Art.	Description
11090	AT 300 1/4"
11000	AT 300 M16x1,5



HIGH PRESSURE HOSE 3/8" - M16X1,5 max pressure 425 bar	
Art.	Description
18063	7,5 mt
18064	10 mt
18065	15mt



ANTISTATIC HOSE 3/16" - M16X1,5 max pressure 210 bar	
Art.	Description
6164	5 mt
55050	7,5 mt
35018	10 mt



ANTIPULSATION HOSE 1/4" - M16X1,5 max pressure 250 bar	
Art.	Description
35013	5 mt
35014	7,5 mt
35017	10 mt
18026	15 mt

SUPER FAST-CLEAN



SUPER FAST-CLEAN NOZZLE

Nozzles code		
SFC07-20	SFC19-60	SFC29-80
SFC07-40	SFC21-20	SFC31-40
SFC09-20	SFC21-40	SFC31-60
SFC09-40	SFC21-60	SFC31-80
SFC11-20	SFC23-20	SFC33-40
SFC11-40	SFC23-40	SFC33-60
SFC13-20	SFC23-60	SFC33-80
SFC13-40	SFC25-20	SFC39-40
SFC13-60	SFC25-40	SFC39-60
SFC15-20	SFC25-60	SFC39-80
SFC15-40	SFC27-20	SFC43-40
SFC15-60	SFC27-40	SFC43-60
SFC17-20	SFC27-60	SFC43-80
SFC17-40	SFC27-80	SFC51-40
SFC17-60	SFC29-20	SFC51-60
SFC19-20	SFC29-40	SFC51-80
SFC19-40	SFC29-60	



Cod. 18280: GASKET



Cod. 18270: SUPER FAST-CLEAN base UE 11/16x16



Art.	Description
30170	Foot valve seal kit



Art.	Description
30174	Sleeve-piston kit



Art.	Description
30173	Compleat gaskets kit



Art.	Description
40108	Pump repair complete kit

Art.	Description
35081	Upper and lower gasket kit
30249	Paint suction kit



GUN EXTENSION	
Art.	Description
153	30 cm
155	60 cm
156	100 cm



TELESCOPIC PAINT ROLLER	
Art.	Description
16988	Roller extra-long fiber
16997	Roller with long fiber
16998	Roller with rare fiber
16999	Roller with medium fiber
16780	Extension 120 - 195 cm



MX 750

MX 1000 E

MX 1100 E

ELECTRIC MIXERS	
Art.	Description
217550	MX 750
217560	MX 1000 E
217570	MX 1100 E



PLA 1/4" + BASE SUPER FAST-CLEAN	
Art.	Description
11420	130 cm
11425	180 cm
11430	240 cm

PLA M16X1,5+BASE SUPER FAST-CLEAN	
Art.	Description
11421	130 cm
11426	180 cm
11431	240 cm



100-L TANK ACCESSORY KIT

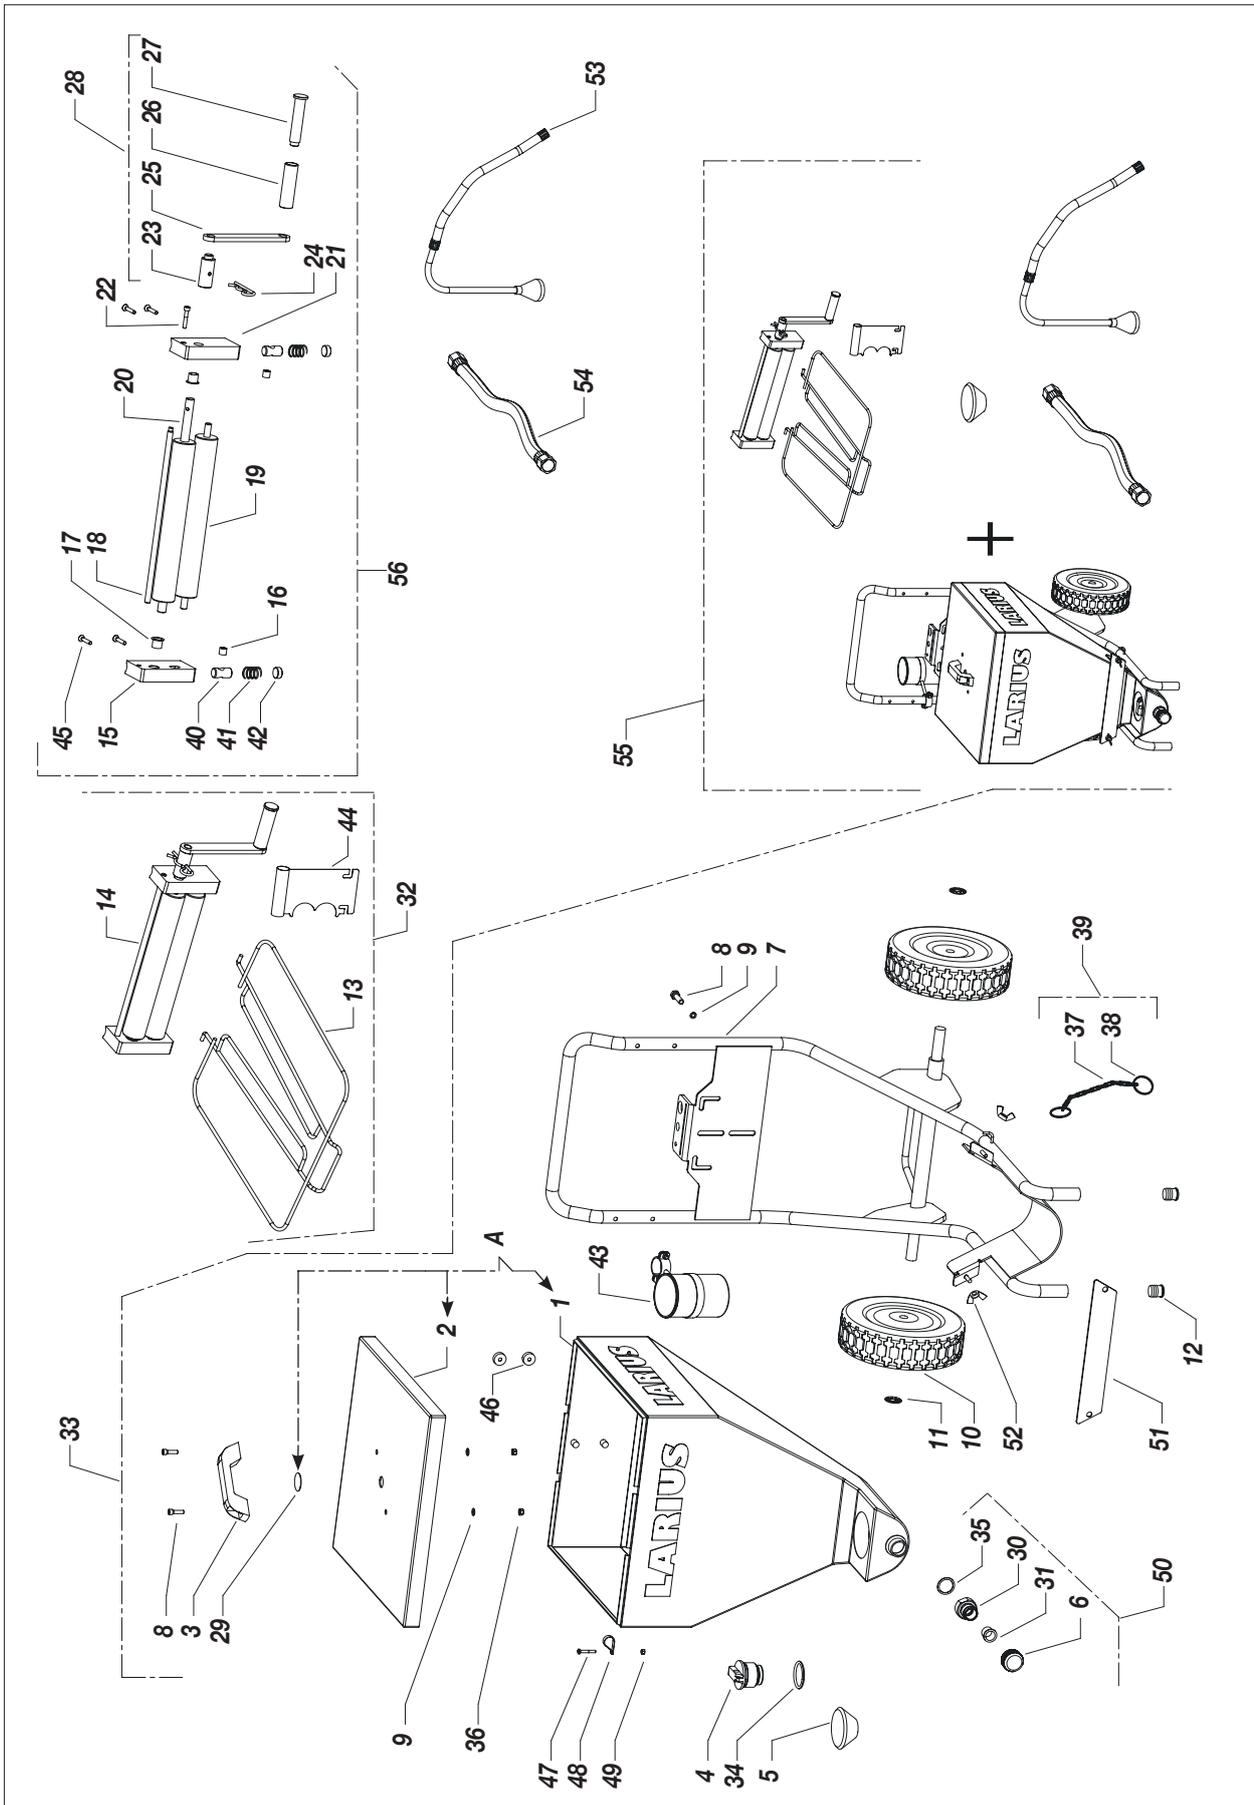


Fig. 1AB



Pos.	Code	Description	Q. ty
A	20326	100 l Tank assembly	1
1		Tank	1
2		Cover	1
3	32003	Carrying handle	1
4	20321	Male plug	1
5	20330	Gasket	1
6	20322	Female plug	1
7	20327	Trolley	1
8	69011	Screw	2
9	34024	Washer	2
10	20303	Wheel	2
11	20305	Wheel stop washer	2
12	95159	Cap	2
13	20328	Bag support bar	1
14	20325	Bag pressing assembly	1
15	20331	Right shoulder	1
16	20343	Bushing	2
17	20323	Bushing	2
18	20336	Spacer	1
19	20333	Idle roller	1
20	20334	Motor roller	1
21	20332	Left shoulder	1
22	91062	Screw	1
23	20337	Bushing	1
24	21683	Split pin	1
25	20335	Lever	1
26	20339	Bushing	1
27	20338	Crank handle	1
28	20319	Crank handle assembly	1

Pos.	Code	Description	Q. ty
29	20324	Cover cap	1
30	19295	Union	1
31	96099	Seal	1
32	18244	Package pressing kit	1
33	18243	Complete tank 100Lt	1
34	20341	O-ring	1
35	20358	Lower cap seal	1
36	52017	Nut	2
37	91564	Chain	0,5 mt
38	18257	Ring	2
39	18256	Cap holding chain	1
40	20344	Adjustment cylinder	2
41	11814	Adjustment spring	2
42	95067	Cap	2
43	85500	Complete tank	1
44	20371	Cleaning spatula	1
45	21545	Screw	4
46	4492	Spacers	.
47	8385	Screw	.
48	3063	Clamp	.
49	8042	Self-tightening nut	.
50	18288	Complete cap/coupling kit	.
51	20372	Fixing plate	.
52	20373	Wing nut	.
53	20348	Circulation hose complete with couplings and dispersion bell	.
54	18223	Suction tube	.
55	18390	Complete accessory kit	.
56	20325	Bag-wringing kit	.



AC VERSIONS

Code	Description
30183	Short Dragon 110V-60Hz without accessories
30182	Long Dragon 110V-60Hz without accessories
30185	Rigid Dragon 110V-60Hz without accessories
30181	Short Dragon 220V-50Hz without accessories
30180	Long Dragon 220V-50Hz without accessories
30184	Rigid Dragon 220V-50Hz without accessories
30187	Short petrol-powered Dragon without accessories
30186	Long petrol-powered Dragon without accessories
4650	Traction-powered Dragon Liner with broken-line painter
4600	Traction-powered Dragon Liner



Fig. 1AC



CE DECLARATION OF CONFORMITY



Company



LARIUS srl
Via Antonio Stoppani 21 - 23801 Calolziocorte (LC) ITALY
Tel: +39 0341 621152
Fax: +39 0341 621243
E-mail: larius@larius.com

Declares under his owns responsibility that the product:

DRAGON Electric piston pump

complies with the directives:

- EC Directive 2006/42 Machinery Directive
- EU Directive 2014/30 Electromagnetic Compatibility (EMC)
- EU Directive 2014/35 Low Voltage (LVD)

furthermore to the
harmonized standards:

- UNI EN ISO 12100-1/-2
Machinery safety, basic concepts, general principles of design. Basic terminology, methodology. Technical principles.

This declaration relates exclusively to the product in the state in which it was placed on the market, and excludes components or modifications which are added or carried out subsequently by end user.

Signature

Pierangelo Castagna
Managing Director

Calolziocorte, 31 October 2020
Location / Date



LARIUS srl

Via Antonio Stoppani 21 - 23801 Calolziocorte (LC) ITALY
TEL. +39 0341 621152 - Fax +39 0341 621243 - larius@larius.com

www.larius.com

