


# CONTROL PANEL

## DIGITAL CONTROL PANEL (WITHOUT TERMINAL BOARD)

- Controller Intellilite4 AMF9
- Supply switc
- Siren
- Emergency stop buttom
- Forced regeneration button
- Forced regeneration request lamp
- Engine failure lamp (PCD)
- Aftertreatment failure lamp (NCD)
- Circuit breaker
- Earth leakage relay
- Earth terminal (PE)
- Output sockets: 1x 400V 63A 3P+N+T CEE IP67  
1x 400V 32A 3P+N+T CEE IP67  
1x 400V 16A 3P+N+T CEE IP67  
1x 230V 16A 2P+T CEE IP67  
1x 230V 16A 2P+T SCHUKO
- Earth leakage with integral over-current circuit breaker for 400V 32A socket
- Earth leakage with integral over-current circuit breaker for 400V 16A socket
- 2 x Earth leakage with integral over-current circuit breaker for 230V 16A socket

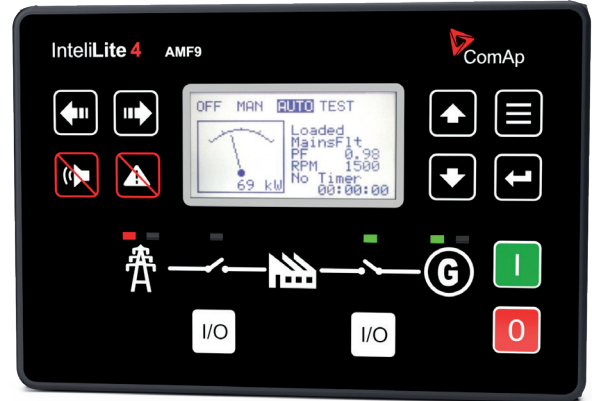

INTELLILITE4 AMF9 CONTROLLER CHARACTERISTICS	
Operating mode	<ul style="list-style-type: none"> <li>• OFF - MAN.- AUTO - TEST</li> </ul>
Display - Pulsanti-LEDs	<ul style="list-style-type: none"> <li>• Backlit display, LCD 132x64 pixels</li> <li>• Buttons / Buttons: START - STOP - RESET ALARMS / FAULT RESET</li> <li>• LEDs: Generator / GCB ON status - Grid status</li> </ul>
Generator Measures	<ul style="list-style-type: none"> <li>• Voltage : L1-L2 / L2-L3 / L3-L1 - N-L1/N-L2/N-L3</li> <li>• Current : I1 - I2 - I3</li> <li>• Frequency Hz</li> <li>• Powers : kVA - kW - kVAR (totali e per fase)</li> <li>• Energy : kVAh - kWh - kVARh</li> <li>• Cos φ (medium and per phase)</li> </ul>
Engine Measures	<ul style="list-style-type: none"> <li>• Water temperature</li> <li>• Oil pressure</li> <li>• Fuel level</li> <li>• Rpm meter</li> <li>• Battery voltage</li> <li>• Maintance</li> <li>• Hours meter</li> <li>• Starts number</li> </ul>
Generator Protections	<ul style="list-style-type: none"> <li>• Overload</li> <li>• Overcurrent</li> <li>• Short circuit</li> <li>• Over-Udervoltage</li> <li>• Over-Uderfrequency</li> <li>• Voltage asymmetry</li> <li>• Unbalanced current</li> <li>• Phase sequence</li> </ul>
Engine Protections	<ul style="list-style-type: none"> <li>• Overspeed</li> <li>• High water temperature warning</li> <li>• Low oil pressure warning</li> <li>• Low fuel level warning</li> <li>• Over-Uder battery voltage</li> <li>• Battery charge alternator failure</li> <li>• Start failure</li> <li>• Stop failure</li> <li>• Emergency stop</li> <li>• Low water level shudown (option)</li> </ul>

AMF functins (Automatic control panel only)	<ul style="list-style-type: none"> <li>• Measure mains voltage : L1-L2 / L2-L3 / L3-L1 - N-L1/N-L2/N-L3</li> <li>• Measure mains frequency</li> <li>• Three phase detection</li> <li>• Over-Under mains voltage</li> <li>• Over-Under mains frequency</li> <li>• Voltage asymmetry</li> <li>• Phase sequence</li> <li>• Dual mutual stand-by application</li> </ul>
Features	<ul style="list-style-type: none"> <li>• Event history, 150 stored events</li> <li>• 3 programmable test timers</li> <li>• Programming from panel or from PC</li> <li>• 3 selectable languages (other languages available)</li> <li>• Direct connection to engines with ECU (Stage V, Tier 4 Final) via Can Bus J1939</li> <li>• External Start and Stop</li> <li>• Programmable inputs and outputs</li> <li>• Alternative configurations (50 / 60Hz)</li> <li>• IP 65 protection</li> <li>• Operating temperature: -20 ° C - + 70 ° C</li> </ul>
Communication	<ul style="list-style-type: none"> <li>• USB port</li> <li>• RS232- RS485 (optional)</li> <li>• Modbus RTU / TCP (optional)</li> <li>• GSM modem. Commands alarms, events via SMS (optional)</li> <li>• Internet connection with Ethernet (optional)</li> <li>• Online control and monitoring on web pages (embedded web server) (optional)</li> <li>• SNMP (optional)</li> <li>• GPS / 4G modem (optional) (geographical tracking via WebSupervisor)</li> <li>• Internal PLC support</li> </ul>